

Frigidaire

Factory Parts Catalog

Product No.	PLEB30T9DCA
	37057391H40S1
Series	30" double
Color	stainless
Market	North America
Wiring Diagram	318046116
Owner's Guide	318200924
Installation Instructions	318201514
Service Data Sheet	318047305
Timer Guide	318200133

 **Electrolux**

ELECTROLUX HOME PRODUCTS, INC.
P.O. Box 212378, Augusta, GA 30917


Publication No.
5995421004
04/11/04
(EN/SERVICE/ECL)
377

**DOUBLE ELECTRIC
WALL OVEN**

Model No.
PLEB30T9D

Copyright © 2004 Electrolux Home Products, Inc.
All rights reserved.

CONTROL PANEL

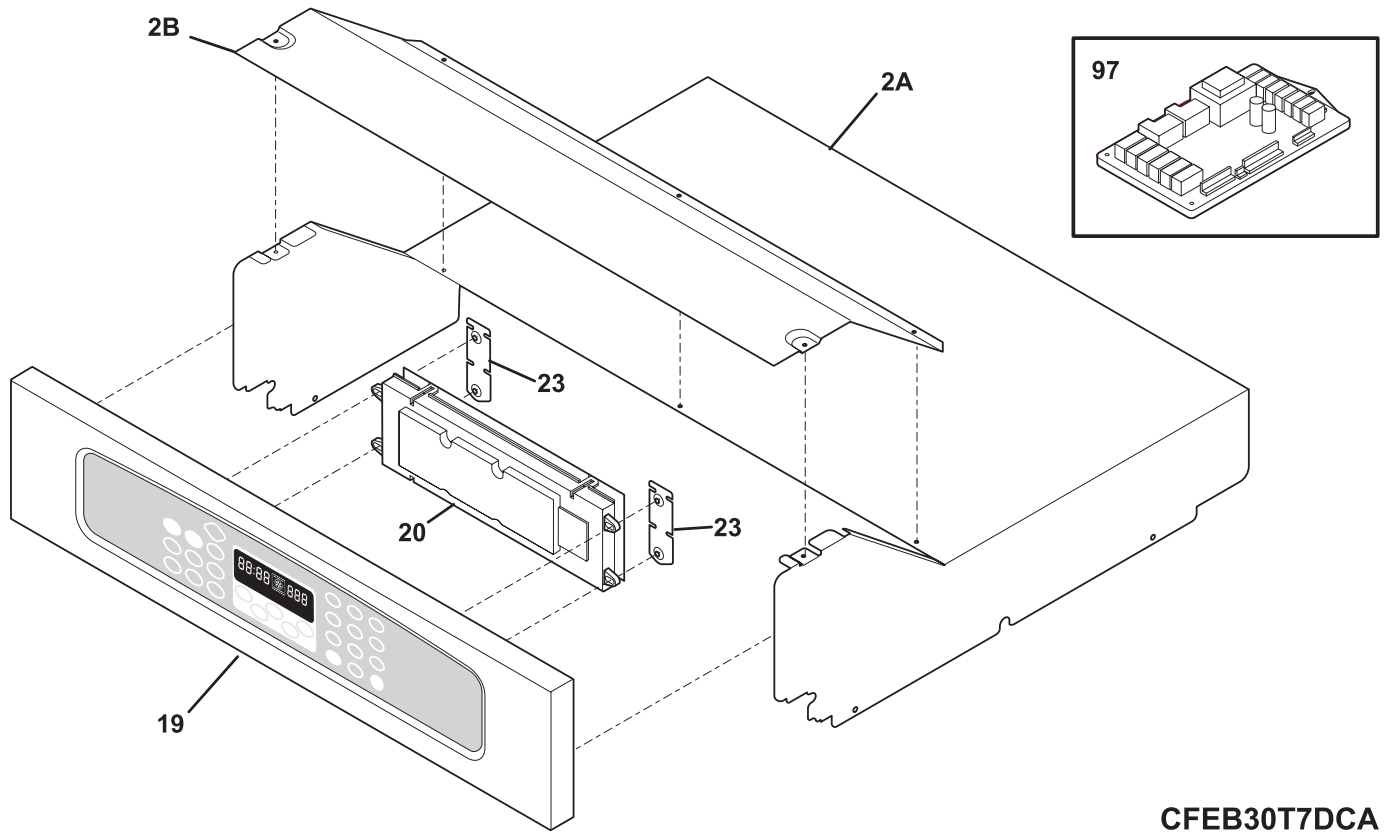

CFEB30T7DCA

CONTROL PANEL

POS. NO	PART NO.	DESCRIPTION
2A	318257300	Shield, oven top
2B	318260100	Cover, box
19	318271512	Control Panel Assembly, steel/glass, stainless/black, w/touch pad
20 #	316429710	Control, electronic, 5800W3, dual oven
*	316021107	Screw, hex head, 8-32, silver
23	318262900	Bracket, control mtg., (2)
97	316429800	Board, relay, dual oven
*	318231704	Harness, wiring, control-relay
*	5303211311	Screw, 8 x 0.500

UPPER OVEN

POS. NO	PART NO.	DESCRIPTION
1	318259200	Back, main
2	318258900	Shield, insulation, upper
6	318262503	Rack, oven
6A	318219500	Rack, broiler pan
8	318262001	Cover, element
8A	318285300	Bracket, element cover
9	5303317977	Pan, broiler
10	5303317976	Insert, broiler pan
12 #	318089917	Switch, light
*	3015722	Clip, wire retainer
14	318224000	Receptacle, oven light
14*	318268099	Insulation, oven light
15	5303013071	Bulb/Lamp, oven light
16	3201911	Cover, oven light, glass
17	5304400195	Retainer, light cover
29	318147411	Bumper, door, (2)
37 #	316217002	Probe, oven temp
41	5303310526	Cover, hinge cutout
54	318222400	Housing, oven light
58A	318133791	Insulation, oven wrapper, back/bottom
58B	318133790	Insulation, oven wrapper, top/sides
58D	318133793	Insulation, 1/2" thick, 43 x 9.5
59	318072560	Duct, oven vent
59A	318261600	Bracket, vent tube
66 #	318255600	Element, broil, 2750W
67	318254901	Element, bake, 3400W, 8 pass
68	5304403015	Support, element hanger
70	318259100	Shield, insulation, sides, (2)
71	318260004	Panel, rear box
76	318056217	Front, oven
80	5303320846	Plate, oven mtg
81	318192400	Spring, oven
82	318258700	Shield, insulation, lower
83	318261400	Liner, oven assy
86	5303310524	Receptacle, hinge
89#	318261200	Motor, latch assy
*	318231705	Harness, latch
99	318252800	Support, side
*	5303300265	Screw, 8-18 x 0.500, chrome, (3)
107	318219401	Cover, fan
108#	318073018	Motor, blower
*	08016432	Screw, truss head, 8-18 x 0.375
108A	318251300	Bracket, fan support
109	316136400	Blade, fan
111	316136600	Nut, fan retainer
112#	318112701	Relay
119#	318004900	Switch, thermal
125#	316415800	Motor, fan
126	318142100	Washer, motor, RH, convection
127	5303310542	Adapter, vent tube, with converter
131	318272900	Box, vent


UPPER OVEN

POS. NO	PART NO.	DESCRIPTION
132	318003000	Plate, shield
142	318123910	Deflector
143	318172904	Support, wire/glass
161#	318255503	Element, convection, 350 W
163	318014111	Spacer
185	318014700	Spacer, oven shield, (4)
219#	318003606	Thermostat, safety
263	316136500	Washer, fan motor
264	318257701	Trim, oven, black, front
272	318249401	Tube, protector
310	5304440067	Cabinet Mounting Kit
311	318246010	Bracket, cabinet mtg, (2)
311*	5304438005	Screw, 6 x 1, black
312	318246702	Tool, cabinet bracket, RH
312	318246703	Tool, cabinet bracket, LH
*	3201861	Screw, 6 x 0.375, (4)
*	5303211311	Screw, 8 x 0.500
*	5303323277	Screw, 8-18 X 13/32
*	5304436875	Screw, 8-18 X 1/2, black

LOWER OVEN

POS. NO	PART NO.	DESCRIPTION
1	318259200	Back, main
2	318258900	Shield, insulation, upper
6	318262503	Rack, oven
8	318262001	Cover, element
8A	318285300	Bracket, element cover
12 #	318089917	Switch, light
*	3015722	Clip, wire retainer
14	318224000	Receptacle, oven light
14*	318268099	Insulation, oven light
15	5303013071	Bulb/Lamp, oven light
16	3201911	Cover, oven light, glass
17	5304400195	Retainer, light cover
29	318147411	Bumper, door, (2)
37 #	316217002	Probe, oven temp
41	5303310526	Cover, hinge cutout
54	318222400	Housing, oven light
56	318259914	Trim, side filler, black, RH
56A	318259915	Trim, side filler, black, LH
58A	318133791	Insulation, oven wrapper, back/bottom
58B	318133790	Insulation, oven wrapper, top/sides
58D	318133793	Insulation, 1/2" thick, 43 x 9.5
59	318072560	Duct, oven vent
59A	318261600	Bracket, vent tube
62	316056000	Terminal Block
62*	5303323139	Screw, 10-24 x 0.906
62*	5303323144	Nut, 10-32
66 #	318255600	Element, broil, 2750W
67	318254901	Element, bake, 3400W, 8 pass
68	5304403015	Support, element hanger
70	318259100	Shield, insulation, sides, (2)
71	318260004	Panel, rear box
76	318056217	Front, oven
80	5303320846	Plate, oven mtg
81	318192400	Spring, oven
82	318258700	Shield, insulation, lower
83	318261400	Liner, oven assy
86	5303310524	Receptacle, hinge
87	318260602	Bracket, cable mtg.
89#	318261201	Motor, latch assy
*	318231705	Harness, latch
90	318259800	Trim, base, stainless
99	318256200	Bracket, side, bottom, (2)
*	5303300265	Screw, 8-18 x 0.500, chrome, (3)
107	318219401	Cover, fan
108#	318073018	Motor, blower
*	08016432	Screw, truss head, 8-18 x 0.375
108A	318251300	Bracket, fan support
109	316136400	Blade, fan
111	316136600	Nut, fan retainer
112#	318112701	Relay
119#	318004900	Switch, thermal

LOWER OVEN

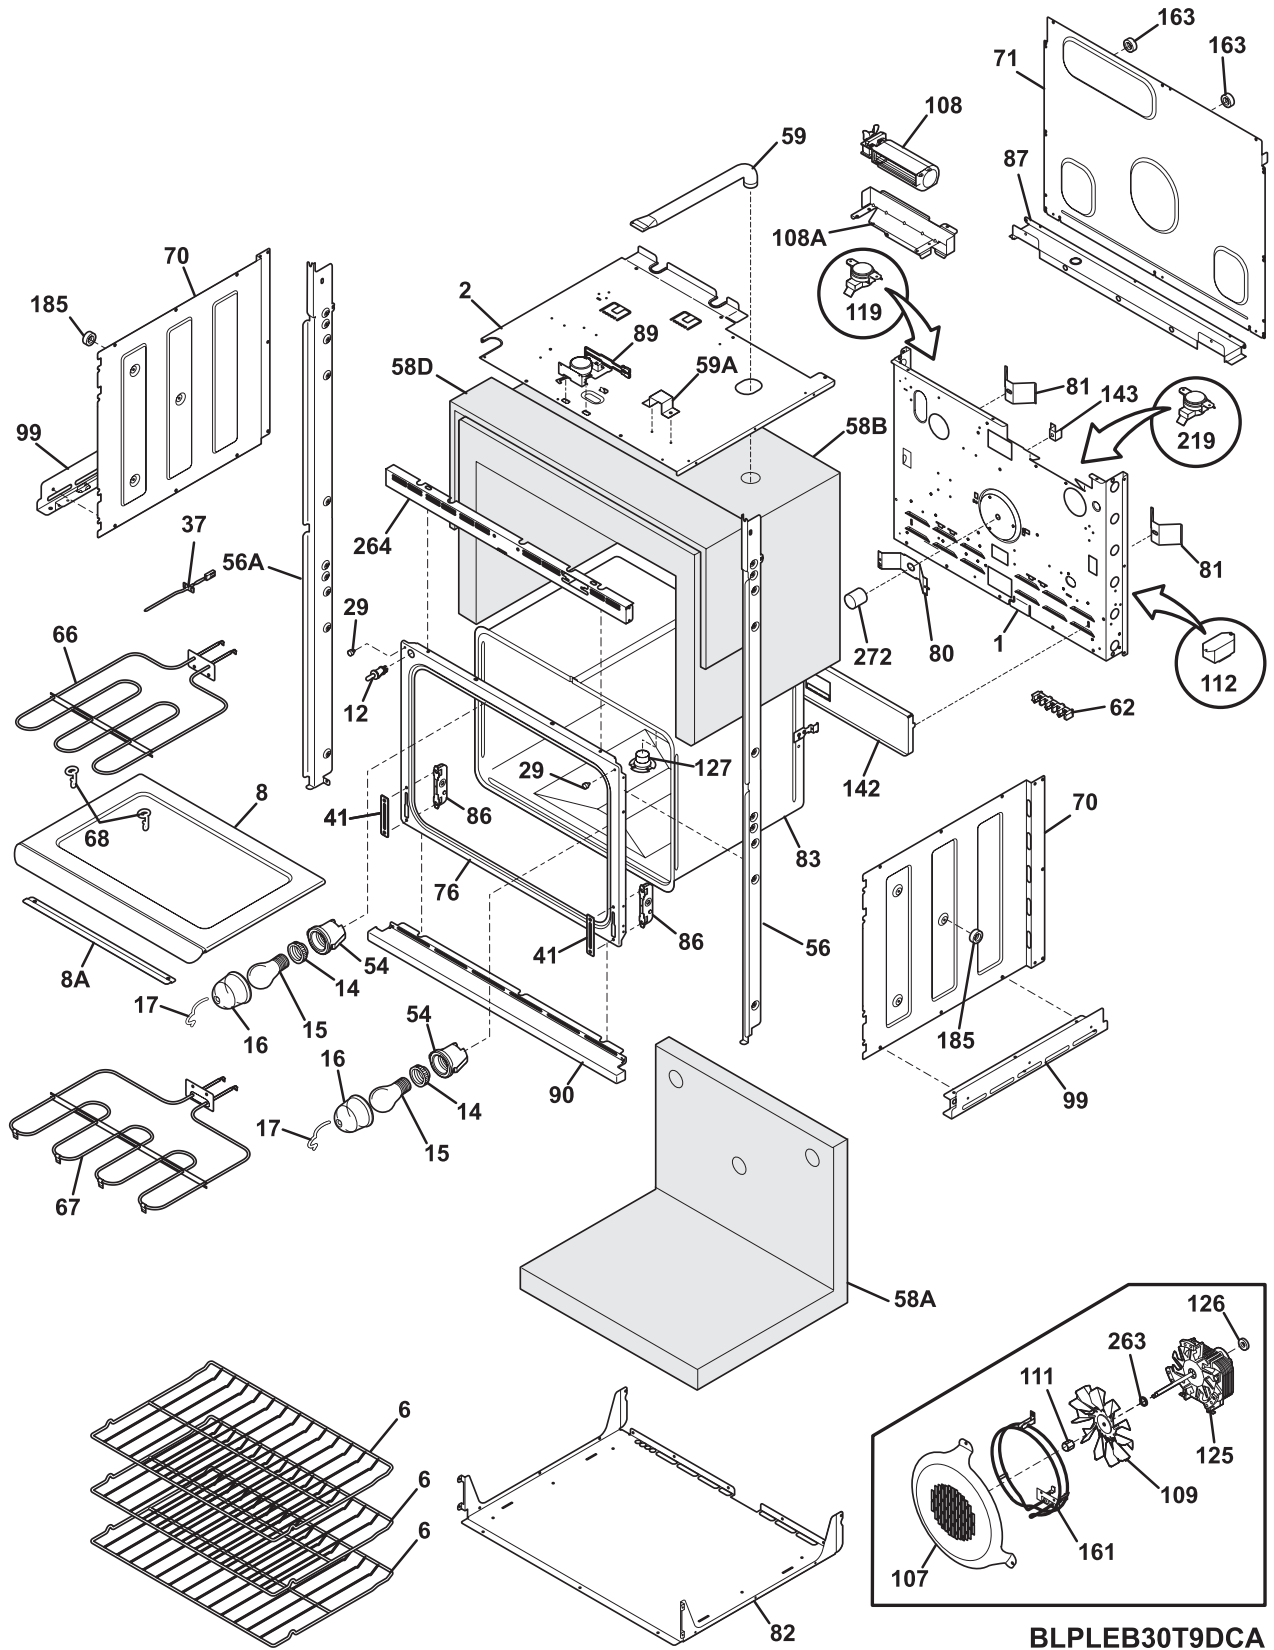


BLPLEB30T9DCA

LOWER OVEN

POS. NO	PART NO.	DESCRIPTION
125#	316415800	Motor, fan
126	318142100	Washer, motor, RH, convection
127	5303310542	Adapter, vent tube, with converter
142	318123910	Deflector
143	318172904	Support, wire/glass
161#	318255503	Element, convection, 350 W
163	318014111	Spacer
185	318014700	Spacer, oven shield, (4)
219#	318003606	Thermostat, safety
263	316136500	Washer, fan motor
264	318257801	Trim, oven, black, front
272	318249401	Tube, protector
* #	318078543	Box & wires assy
*	318231709	Harness, wiring, main
*	5303323136	Screw ground
*	5303323277	Screw, 8-18 X 13/32
*	3201861	Screw, 6 x 0.375, (4)
*	5303211311	Screw, 8 x 0.500
*	5304436875	Screw, 8-18 X 1/2, black

DOOR

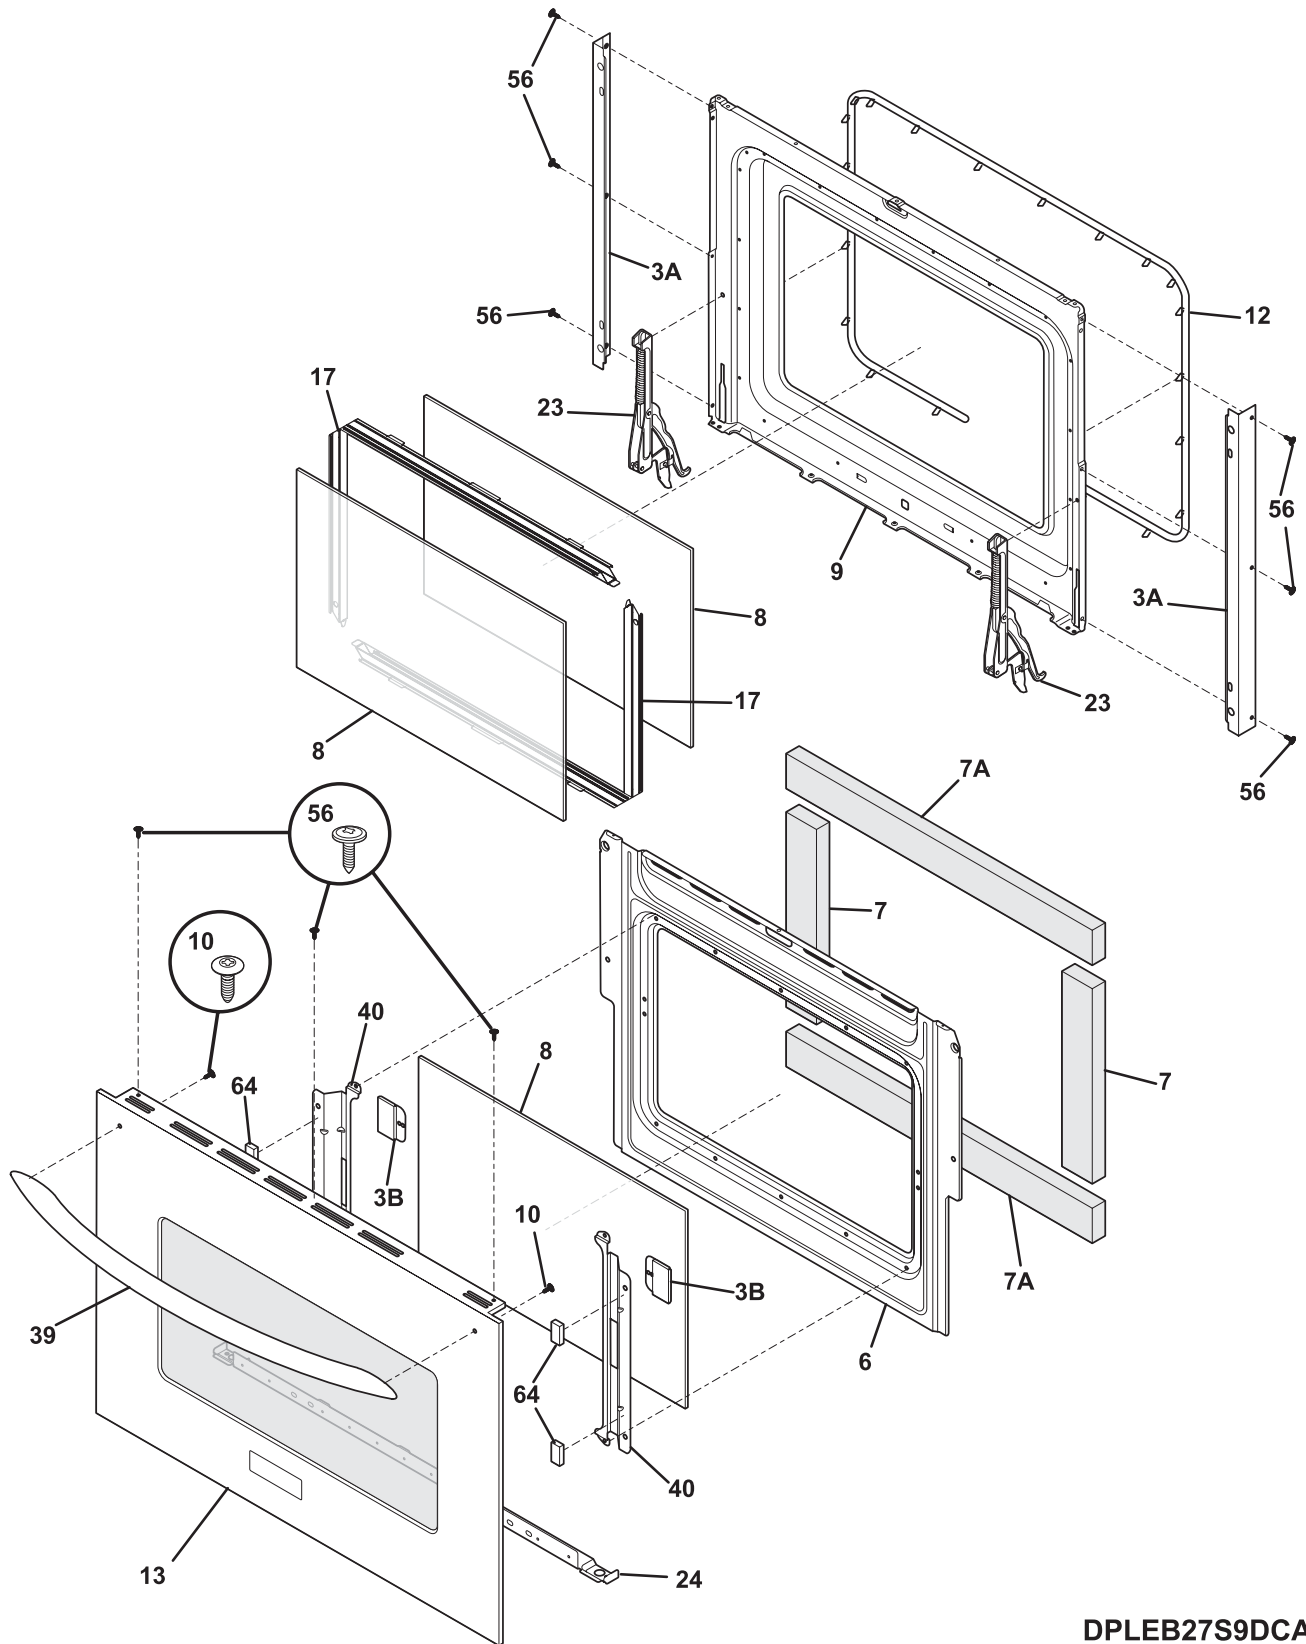

DPLEB27S9DCA

DOOR

POS. NO	PART NO.	DESCRIPTION
3A	318260401	Trim, oven door, side, (2)
3B	318262101	Cover, rear door, black, (2)
6	318260500	Baffle, door
7	318133792	Insulation, oven door
7A	318133797	Insulation, oven door, cavity
8	316117500	Glass, oven door, heat barrier
9	318259605	Liner, oven door, upper
10	5303311174	Screw, 10-24 x 3/8
12	318053120	Seal, oven door
13	318272151	Door Assy, stainless steel, outer, w/tape & foil
13	318272153	Door Assy, w/nameplate, stainless steel, outer, w/tape & foil
17	316402403	Spacer, door glass, (2)
23	318024714	Hinge, oven door
24	318260301	Trim, door, black, lower
39	318219800	Handle, door/drawer, stainless
40	318242700	Bracket, glass holder, (2)
56	5304436875	Screw, 8-18 X 1/2, black
64	318165800	Spacer, (4)
*	318163602	Cleaner, stainless steel
*	5303323277	Screw, 8-18 X 13/32

WIRING DIAGRAM

