

LG REFRIGERATION
LRBCC1204S

Bottom Freezer Refrigerator

Sleek Pocket Handle Design

12 cu.ft. Capacity

Auto Ice Maker

Fingerprint Resistant Finish

Smart Inverter Compressor

Reversible Door

AVAILABLE COLORS



PrintProof™ Stainless Steel


CAPACITY

Refrigerator (cu.ft.)	8.20
Freezer (cu.ft.)	3.80
Total Capacity (cu.ft.)	12.00

ENERGY

Energy Consumption (kWh/Year)	486
ENERGY STAR® Qualified	Yes

WATER & ICE SYSTEM

Daily Ice Production (lbs)	3.2 lbs.
Ice System	Factory Installed Ice Maker

COOLING

Inverter Compressor	Yes
Door Cooling+	Yes
Multi-Air Flow™ System	Yes
Temperature Sensors	4

CONVENIENCE

Display Type	Membrane / White LED
Temperature Controls	Electronic/Digital
Door Alarm	Yes
Auto Closing Door Hinge	Yes
Sabbath Mode	Yes
LoDecibel™ Quiet Operation	Yes
Reversible Door	Yes

REFRIGERATOR

No. of Shelves	2
Shelf Construction	Tempered Glass
Crisper Bins	1
Refrigerator Light	Ceiling LED

REFRIGERATOR DOOR

No. of Bins	3
Door Bin Construction	1 Piece (Clear)

FREEZER

Door Type	Swing Door
Drawers	2
Ice Bin / In-Door Ice	Icemaker & Ice bin in the freezer
Freezer Handle	Pocket Handle

SMART FEATURES

SmartDiagnosis™	Yes
-----------------	-----

MATERIALS AND FINISHES

Contour Door	Yes
Hidden Hinges	Yes
Surface	Smooth
Fingerprint & Smudge Resistant Exterior	Yes
Handles	Pocket Handles
All Available Colors	PrintProof™ Stainless Steel

DIMENSIONS/CLEARANCES/WEIGHTS

Depth with Handles	26 5/8"
Depth without Handles	26 5/8"
Depth without Door	24"
Depth (Total with Door Open)	48 3/16"
Height to Top of Case	73 1/4"
Height to Top of Door Hinge	73 1/4"
Width	23 1/2"
Width (Door Open 90° with Handle)	23 13/16"
Width (Door Open 90° without Handle)	23 13/16"
Installation Clearance	Top 1", Back 2"
Weight (Unit/Carton)	154 lbs / 172 lbs
Carton Dimensions (WxHxD)	25 3/16" x 76 5/16" x 29 5/8"

LIMITED WARRANTY

Parts & Labor	1 Year
Sealed System (Parts & Labor)	5 Years
Compressor (Parts & Labor)	5 Years
Inverter Compressor (Parts Only)	6-10 Years

UPC CODES

LRBCC1204S (PrintProof™ Stainless Steel)	048231807364
--	--------------

LG REFRIGERATION

LRBCC1204S

Bottom Freezer Refrigerator

QUICK INSTALL & CLEARANCES

For full installation directions/clearances please refer to the corresponding User Manual and Installation Guide.


DIMENSIONS/CLEARANCES/WEIGHTS

A Depth without Door	24"
B Depth with Door	26 5/8"
C Depth (Total with Door Open 90°)	48 3/16"
D Width	23 1/2"
E Width (with Door Open 90°)	23 13/16"
F Width (with Door Open Fully)	FPO
G Door Edge Clearance with Handle (Not Shown)	FPO
J Door Edge with Clearance without Handle (Not Shown)	FPO
K Height to Top of Case	73 1/4"
L Height to Top of Door Hinge	73 1/4"
M Back Clearance	2"
Installation Clearances	Top 1", Back 2"
Carton Dimensions (WxHxD)	25 3/16" x 76 5/16" x 29 5/8"



ENERGY

Energy Consumption (kWh/Year)	486
ENERGY STAR® Qualified	Yes

PRODUCT DIMENSIONS

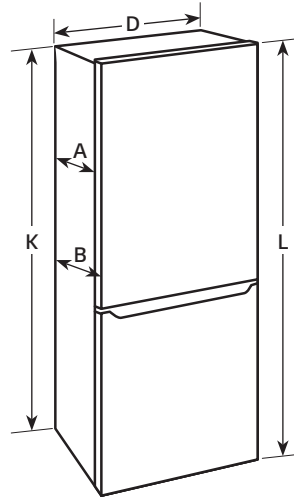

CLEARANCES

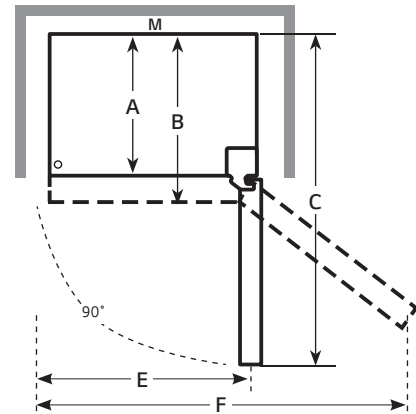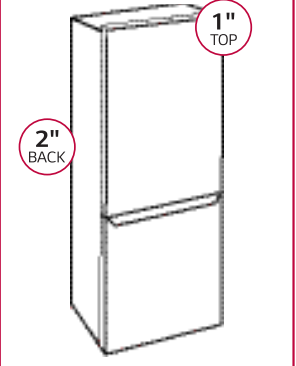

CHOOSING THE PROPER LOCATION

WATER

Select a place where a water supply can be easily connected for the automatic

NOTE

- The water pressure must be 20 – 120 psi or 138 – 827 kPa or 1.4 – 8.4 kgf/cm². If the refrigerator is installed in an area with low water pressure (below 20 psi), you can install a booster pump to compensate for the low pressure.

ELECTRICITY

The refrigerator should always be plugged into its own individual properly grounded electrical outlet rated for 115 Volts, 60 Hz, AC only, and fused at 15 or 20 amperes. This provides the best performance and also prevents overloading house wiring circuits which could cause a fire hazard from overheated wires. It is recommended that a separate circuit serving only this appliance be provided.

WARNING

- To reduce the risk of electric shock, do not install the refrigerator in a wet or damp area.

FLOORING

To avoid noise and vibration, the unit must be leveled and installed on a solidly constructed floor. If required, adjust the leveling legs to compensate for the unevenness of the floor. The front should be slightly higher than the rear to aid in door closing. Leveling legs can be turned easily by tipping the cabinet slightly. Turn the leveling legs to the left to raise the unit or to the right to lower it.

NOTE


- Installing on carpeting, soft tile surfaces, a platform or weakly supported structure is not recommended.

AMBIENT TEMPERATURE

Install this appliance in an area where the temperature is between 55°F (13°C) and 110°F (43°C). If the temperature around the appliance is too low or high, cooling ability may be adversely affected.

CONNECTING POWER AND SECURING SPACE FOR WATER SUPPLY PIPE


- Make sure the location of the water supply pipe is within the marked range.
- Before connecting the power, always make sure to ground the product. (If the product is not grounded, the user may be able to feel the electricity due to the minute leakage current when touching the refrigerator door handle or side corner even when there is no issue with the product.)
- Do not ground the product to gas pipe, plastic water pipe or telephone wire etc. It can cause electric shock and explosion.

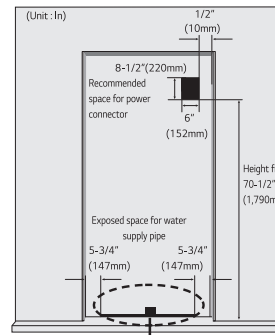

Power connection

The location of the 115V 60Hz power connector must be located on the rear side of the product as shown in the picture.

When installing the product, make sure to check whether the cord is hung on the hook on the rear side so that it is not pressed on the refrigerator. Damaged power cord can cause a fire.

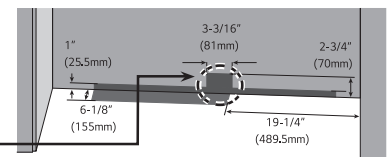

Installation space for water supply pipe

Place the water hose for ice maker and water dispenser as shown in the picture, and prepare hose to come up from the floor. (Copper pipe with diameter of 5/16" (8mm) is recommended for the water hose.) If the water pipe and water hose is located far from the product, bury the water hose on the floor and provide appropriate treatment.

