

Whirlpool® Top Mount Refrigerator

PRODUCT MODEL NUMBERS

ET4WSKYS	ET6WSKXS	W4TXNWFV
ET4WSKXS	ET8AHKXR	W5TXEWFV
ET4WVLXV	ET8AHMXR	W6TXNWFV
ET5WSEXS	ET8WTKXV	W8TXNWFV
ET5WSEXV		W8TXNWMW


Electrical: A 115-Volt, 60-Hz, AC-only, 15- or 20-amp fused, grounded electrical supply is required. It is recommended that a separate circuit serving only your refrigerator be provided. Use an outlet that cannot be turned off by a switch. Do not use an extension cord.

Water: Connect the ice maker to a cold water line with water pressure between 30 and 120 psi (207 and 827 kPa).

If a reverse osmosis water filtration system is connected to your cold water supply, the water pressure to the system needs to be a minimum of 40 to 60 psi (276 to 414 kPa).


IMPORTANT: The pressure of the water coming out of a reverse osmosis system going to the water inlet valve of the refrigerator needs to be between 30 and 120 psi (207 and 827 kPa).

PRODUCT DIMENSIONS

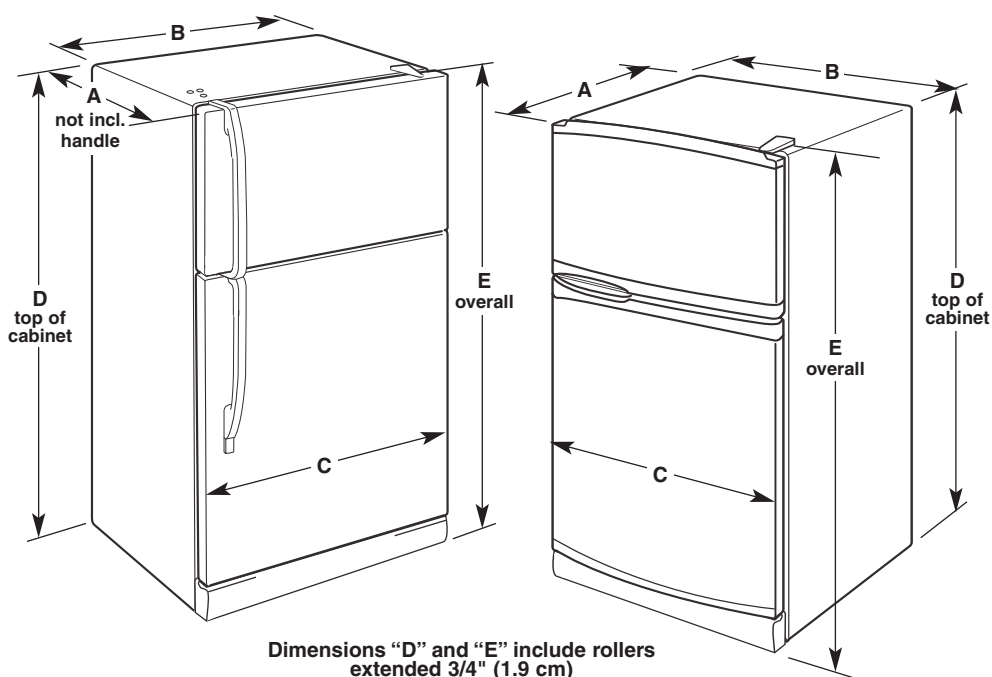

Model	Depth "A"	Cab. Width "B"	Door Width "C"	Cab. Height "D"	Overall Height "E"
14 cu.ft.	29-3/4" (75.6 cm)	28" (71.1 cm)	28" (71.1 cm)	62-1/8" (157.8 cm)	62-3/4" (159.4 cm)
15 cu.ft.	31-1/8" (79.1 cm)	28" (71.1 cm)	28" (71.1 cm)	62-1/8" (157.8 cm)	62-3/4" (159.4 cm)
16 cu.ft. ET6WSKXS	31-1/8" (79.1 cm)	28" (71.1 cm)	28" (71.1 cm)	65-1/4" (165.7 cm)	65-3/4" (167 cm)
16 cu.ft. W6TXNWFV	30-7/8" (78.4 cm)	28" (71.1 cm)	28" (71.1 cm)	65-1/4" (165.7 cm)	65-3/4" (167 cm)
18 cu.ft. ET8AHMXR ET8WTKXV	31-1/8" (79.1 cm)	28" (71.1 cm)	28" (71.1 cm)	67-3/8" (171.1 cm)	67-7/8" (172.4 cm)
18 cu.ft. W8TXNWFV W8TXNWMW	30-7/8" (78.4 cm)	28" (71.1 cm)	28" (71.1 cm)	67-3/8" (171.1 cm)	67-7/8" (172.4 cm)

LOCATION REQUIREMENTS

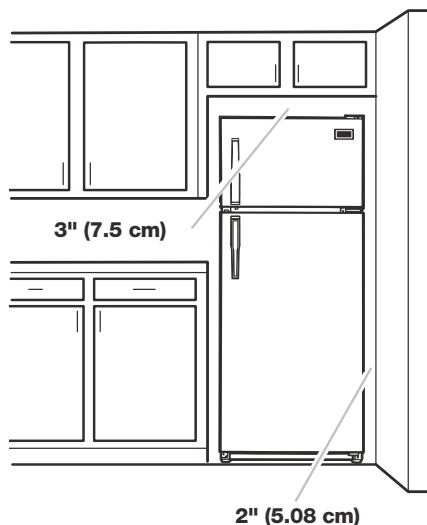

To ensure proper ventilation for your refrigerator, allow for a 1/2" (12.7 mm) space on each side. Allow 3" (7.5 cm) of space between overhead cabinets and refrigerator top. Allow at least 1" (25.40 mm) between back of cabinet and the wall. If your refrigerator has an ice maker, make sure you leave some extra space at the back for the water line connections.

If you are installing your refrigerator next to a fixed wall, leave 2" (5.08 cm) minimum on the hinge side (depending on your model) to allow for the door to swing open.

NOTE: Do not install the refrigerator near an oven, radiator, or other heat source, nor in a location where the temperature will fall below 55°F (13°C).