

Installation Instructions

If you have questions, call 800.626.2000 or visit our website at: www.monogram.com

**Wine Chiller
ZDWC240NBS
and
Beverage Center
ZDBC240NBS**

Design Guide
With Installation Instructions



Monogram.®
We bring good things to life.

Safety Information

BEFORE YOU BEGIN:

Read these instructions completely and carefully.

IMPORTANT - Save these instructions for local inspector's use.

IMPORTANT - Observe all governing codes and ordinances.

Note to Installer - Be sure to leave these instructions with the Consumer.

Note to Consumer - Keep these instructions with your Owner's Manual for future reference.

WARNING - This appliance must be properly grounded. See "Electrical Supply" page 4.

ATTENTION - Cet appareil doit être correctement mis à la terre. Consulter <<Alimentation électrique>>, page 4.

If you received a damaged wine chiller or beverage center, you should immediately contact your dealer or builder.

Skill Level - Installation requires basic mechanical skills. Proper installation is the responsibility of the installer. Product failure due to improper installation is not covered under the GE Appliance Warranty.

WARNINGS:

- Use this appliance only for its intended purpose.
- Immediately repair or replace electrical service cords that become frayed or damaged.
- Unplug the wine chiller or beverage center before cleaning or making repairs.
- Repairs should be made by a qualified service technician.

ATTENTION:

- Il ne faut utiliser cet appareil que pour l'usage pour lequel il a été construit.
- Il faut réparer ou remplacer immédiatement tout cordon d'alimentation électrique effiloché ou endommagé.
- Débrancher le bar ou le réfrigérateur à vin avant le nettoyage ou toute intervention.
- Les réparations doivent être faites par un technicien qualifié.

For Monogram local service in your area,
1-800-444-1845

For Monogram service in Canada
1-888-880-3030

For Monogram Parts and Accessories, call
1-800-626-2002.

www.monogram.com

CONTENTS

Design Guide


The Installation Space	3
Product Clearances	3
Side-by-Side Installation	3

Installation Instructions

Tools, Hardware	4	Step 3, Leveling	6
Grounding the Product	4	Step 4, Connect Power	6
Staining Wood Drawer Fronts	4	Step 5, Slide Product into Cutout	6
Step 1, Remove Packaging	4	Step 6, Install Badge	6
Step 2, Reverse Door Swing	5	Step 7, Set Temperature Controls	6
		Template for Badge	Back Cover

Design Guide

THE INSTALLATION SPACE

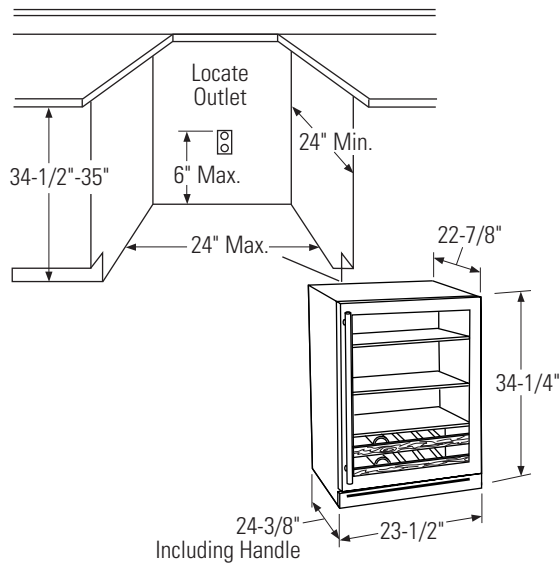

The cutout depth must be 24"

The cutout dimensions shown allows for a full door swing and access to the pull-out racks when installed as a built-in.

- The wine chiller and beverage center can be installed freestanding.
- If installing between frameless cabinets, a 1/2" wide filler strip or side panel may be needed on hinge side. The filler strip will act as a spacer between the wine chiller case and adjacent cabinet door swing. The width of the opening must include the filler panels. **Note:** The door should protrude 1" beyond the surrounding cabinets.

Additional Specifications


- A 120 volt 60Hz., 15 or 20 amp power supply is required. An individual properly grounded branch circuit or circuit breaker is recommended. Install a properly grounded 3-prong electrical receptacle recessed into the back wall as shown. Electrical must be located on rear wall as shown. **Note:** GFI (ground fault interrupter) is not recommended.

PRODUCT CLEARANCES

The wine chiller and beverage center is factory set for a 110° door swing.

When installed in a corner:

- Allow 4" min. clearance on the hinge side for the 90° door swing and to allow racks to slide out.
- Allow 10" minimum clearance on the hinge side for a full 110° door swing.

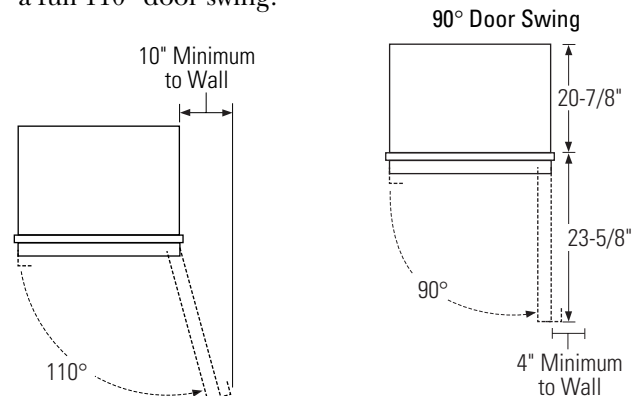

- The door swing is reversible on all models. If desired, change the door swing before installation.


Choose the location:

- The beverage center or wine chiller may be closed in on the top and three sides as long as the front is unobstructed for air circulation and proper access to the door.
- Do not install the wine chiller where the temperature will go below 55°F (13°C) or above 90°F (32°C).
- Do not install where it will be subject to direct sunlight, heat or moisture.

SIDE-BY-SIDE INSTALLATIONS

Increase storage capacity by installing two Monogram beverage centers or wine chillers together. Or for a complete refreshment center, install a beverage center and wine chiller together.

- A side-by-side installation requires a 48" wide opening. No trim kits required.
- Products must operate from properly grounded separate receptacles.

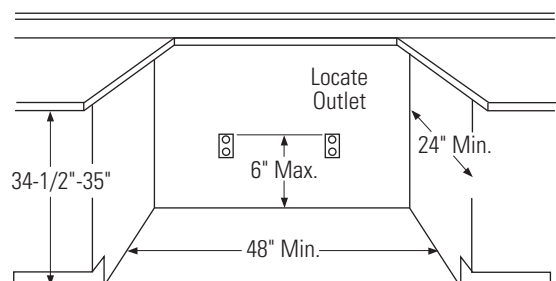

Installation Instructions

TOOLS REQUIRED

- #2 Phillips screwdriver
- 1" open-end wrench
- Torx screwdriver
- Flat edge tool

HARDWARE SUPPLIED

- Monogram nameplate
- Hardware for changing door swing

GROUNDING THE WINE CHILLER AND BEVERAGE CENTER

IMPORTANT - (Please read carefully)


FOR PERSONAL SAFETY, THIS APPLIANCE MUST BE PROPERLY GROUNDED.

The power cord of this appliance is equipped with a three-prong (grounding) plug which mates with a standard three-prong (grounding) wall receptacle to minimize the possibility of electric shock hazard from this appliance.

Have the wall outlet and circuit checked by a qualified electrician to make sure the outlet is properly grounded.

Where a standard 2-prong wall outlet is encountered, it is your personal responsibility and obligation to have it replaced with a properly grounded 3-prong wall outlet.

DO NOT, UNDER ANY CIRCUMSTANCES, CUT OR REMOVE THE THIRD (GROUND) PRONG FROM THE POWER CORD.

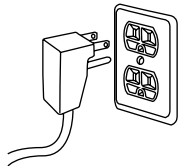

DO NOT USE AN ADAPTER PLUG TO CONNECT THE REFRIGERATOR TO A 2-PRONG OUTLET.

DO NOT USE AN EXTENSION CORD WITH THIS APPLIANCE.

STAINING WOOD DRAWER FRONTS

The drawer fronts on the wine chiller and beverage center are unfinished cherry wood. During use, oil from hands may accumulate and stain the wood.

- The drawer fronts may be stained and sealed to match adjacent cabinetry. The tinted glass will make the stained wood appear darker. A true color match can be seen only when the door is opened.
- Apply the stain and sealer according to the manufacturers' instructions. To avoid unpleasant odor, keep the door open to ventilate and allow the stain/sealer to dry completely before using the product.

STEP 1 REMOVE PACKAGING

- Remove corner blocks and foam drawer stops.
- Remove all packing material, tape and protective plastic coverings.

CAUTION: Small objects are a choke hazard for children. Remove and discard any parts not used.

PRUDENCE – Les petits objets peuvent étrangler les enfants. Il faut jeter toutes les pièces qui ne sont pas utilisées.

Installation Instructions

STEP 2 REVERSE DOOR SWING

SKIP THIS STEP IF DOOR SWING SUITS THE INSTALLATION

Parts Included:

- Top left case hinge
- Bottom left case hinge

Tools Needed:

- Phillips Screwdriver
- Torx Screwdriver


Note: All parts will be reused except for bottom and top case hinges.

To remove the door:

- Remove 2 screws holding toekick.
- Remove hinge plug cover on top left side of cabinet.
- Flatten the shipping carton to use as a pad for the door.
- Remove the 3 screws holding the top case hinge.
- Lift off case hinge, it will not be used again.
- Lift door off bottom case hinge.
- Remove bottom case hinge and cam riser.
- Remove fill plug on top right side of door.
- Remove door hinge, door stop and screw from bottom right side of door.

Rotate the door:

Handle will be on right side of door, hinges will go on the left.

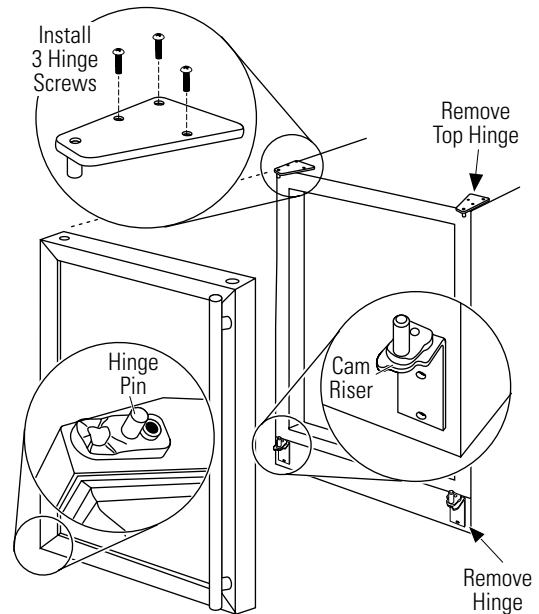

Reinstall the Door:


- Install bottom case hinge from kit and cam on the left side of the unit.
- Install door hinge and door stop to bottom left of door.
- Install fill plug on the top left of the door.
- Place door on bottom case hinge.
- Install top case hinge from kit on top left of cabinet.
- Install hinge plug cover on top right of unit.
- Move plug on toekick to opposite side.
- Install toekick. **Verify that spacers are attached to screw holes.**
- Install Monogram nameplate on door.
- Put remaining case hinges in bag for possible future use.

Note: Verify that door is on straight and screws are tightened. If not the door will sag.

Installation Instructions

STEP 3 LEVEL

- Use a 1" open-end wrench to turn the leveling legs and raise or lower the product.
- Adjust carefully, the wine chiller or beverage center should be level and plumb with cabinetry, and should align with adjacent toekick height.

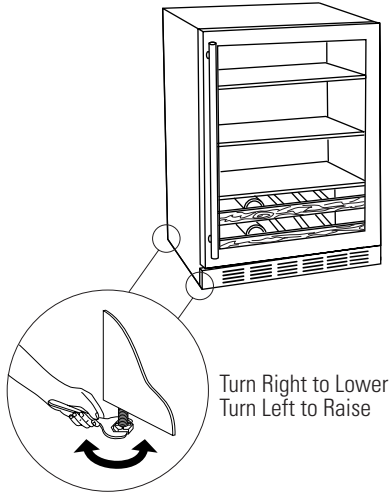

STEP 4 CONNECT POWER

- Connect power cord plug to a properly grounded receptacle.
- Check to make sure power is on by opening the door to see if interior light turns on.

STEP 5 SLIDE PRODUCT INTO THE CUTOUT

- Carefully, slide the wine chiller or beverage center into the opening. Be careful not to entangle power cord.
- Make certain that the door protrudes 1" beyond the surrounding cabinets.


STEP 6 INSTALL NAMEPLATE

- Follow instructions on the back page for installation of the Monogram nameplate.

STEP 7 SET TEMPERATURE CONTROLS

- The temperature controls are preset. Refer to the Owner's Manual for more information. Allow 24 hours for temperature to stabilize.


TEMPLATE FOR NAMEPLATE LOCATION

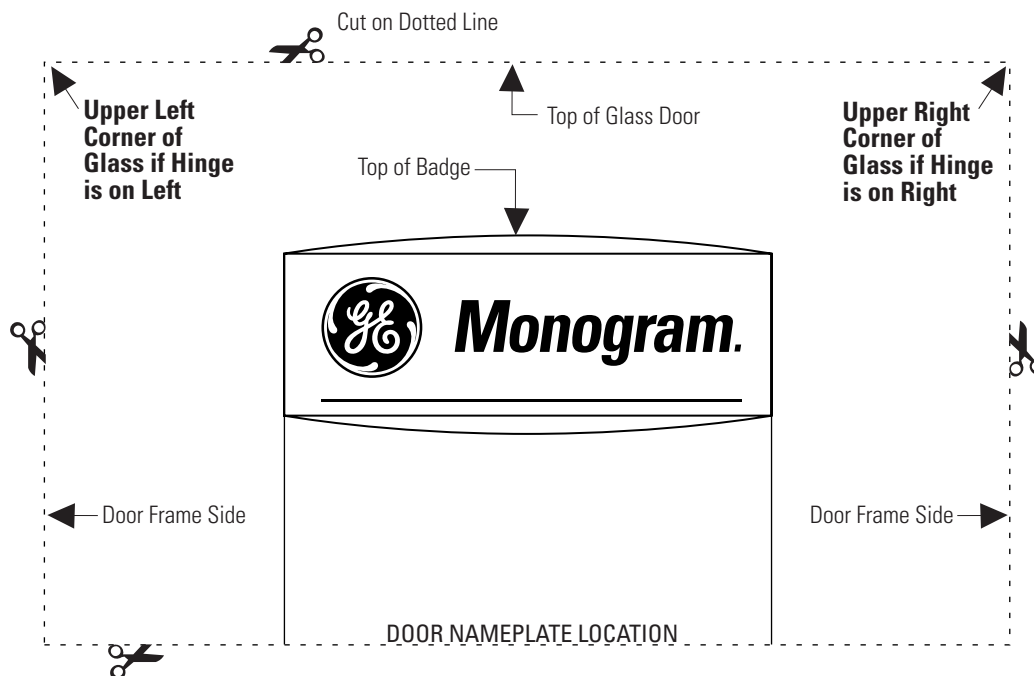

To position nameplate:

- Cut template along dotted line.
- Hold or tape template behind glass door so that it is visible from the front side.
- Remove backing from nameplate.
- Place nameplate onto front side of door, matching illustration on the template.

IMPORTANT: Nameplate must be placed on the opposite side of the door handle.

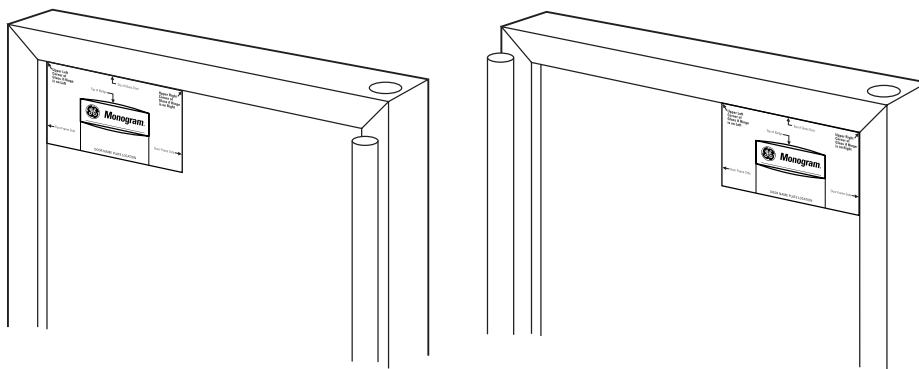

Note: While performing installations described in this book, safety glasses or goggles should be worn.

For Monogram® local service in your area, call 1-800-444-1845.

Note: Product improvement is a continuing endeavor at General Electric. Therefore, materials, appearance and specifications are subject to change without notice.



Monogram.®
We bring good things to life.

General Electric Company
Louisville, KY 40225

Pub. No. 49-60210

Dwg. No. 197D5129P001

(N.D. 615) 10/02