


# KitchenAid® 30" Freestanding Electric Range

## PRODUCT MODEL NUMBERS

KERA205P  
KERI201P  
KERI203P

**Electrical:** This range can be direct wired to a four-wire or three-wire, 8 gauge copper or 6 gauge aluminum wire wiring system or a range power supply cord can be used. A four-wire or three-wire, single-phase, 120/240-volt, 60 Hz, AC-only, electrical supply is required on a 40 amp circuit, (or, if specified on the model/serial rating plate, a four-wire or three-wire, single-phase 120/208-volt, 60 Hz, AC-only electrical supply is available, a 40 amp circuit), fused on both sides of the line. A time-delay fuse or circuit breaker is recommended. The model/serial rating plate is located on the oven frame behind the storage drawer panel.


## OVERALL DIMENSIONS

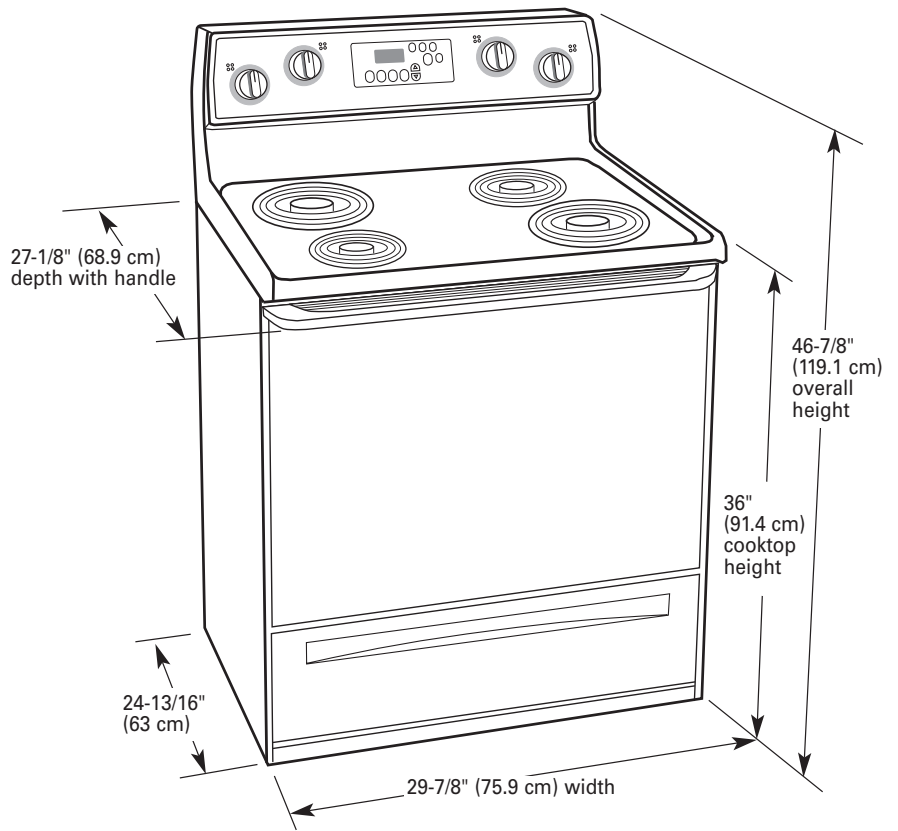

## CABINET OPENING DIMENSIONS

Cabinet opening dimensions shown are for:

25" (63.5 cm) countertop depth,  
24" (61 cm) base cabinet depth,  
36" (91.4 cm) countertop height

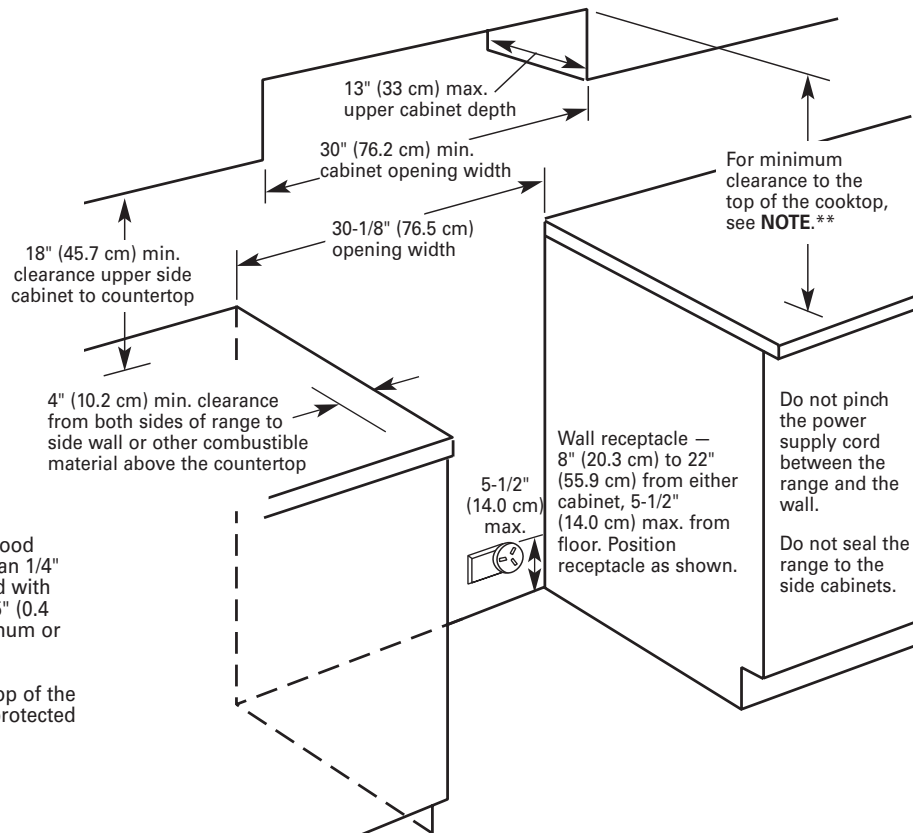

**\*NOTE:** 24" (61 cm) min. when bottom of wood or metal cabinet is protected by not less than 1/4" (6.4 mm) flame retardant millboard covered with not less than No. 28 MSG sheet steel, 0.015" (0.4 mm) stainless steel, 0.024" (0.6 mm) aluminum or 0.020" (0.5 mm) copper.

30" (76.2 cm) min. clearance between the top of the cooking platform and the bottom of an unprotected wood or metal cabinet.