• Limited Lifetime





MODERN ARCHITECTURAL SIDE LEVER STAINLESS STEEL PRO PULL-DOWN KITCHEN FAUCET

Pull-Out/Pull-Down


R7521SS

FEATURES FINISH WARRANTY

• Stainless Steel


• Metal lever

- Dual spray modes
- Stainless steel construction
- 1 5/8" max. installation depth on deck
- Ceramic disc control cartridge
- 9 5/8" reach C-spout
- Spout is fixed, metal hose, metal handspray and spring swivel
- 1.8 GPM
- Will lock in spray mode
- Requires 2 1/2" clearance from backsplash to center of faucet hole
- 1 3/8" cutout

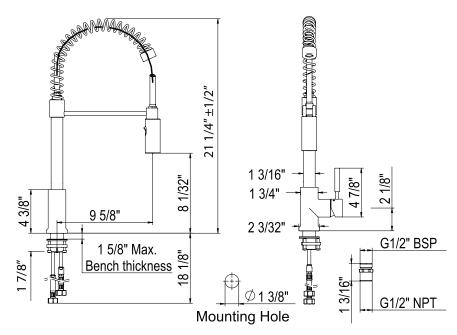



SPARE PARTS

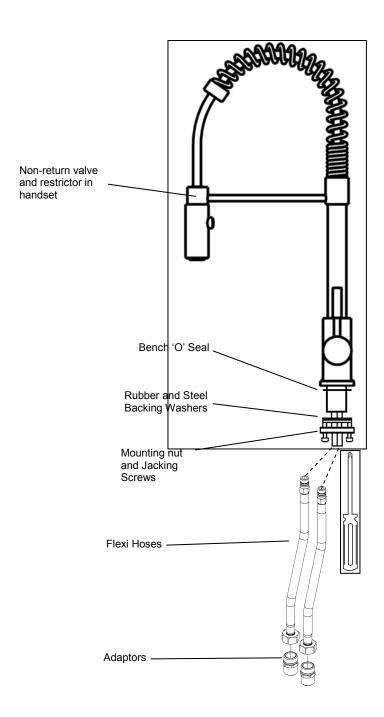




INSTALLATION INSTRUCTIONS

ROHL MODERN ARCHITECTURAL SIDE LEVER STAINLESS STEEL PRO PULL-DOWN KITCHEN FAUCET

INSTALLATION INSTRUCTIONS **R7521SS**

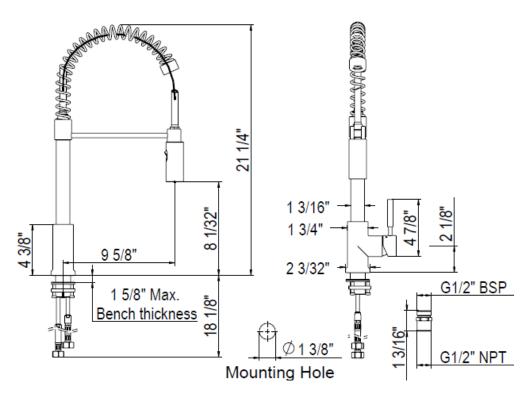

Please leave this form with the product once installed.

SYSTEM REQUIREMENTS

To ensure the optimum performance and customer satisfaction please adhere to the following:

- Flush out all pipe work prior to installation.
- Minimum operating pressure 40psi
 Maximum operating pressure 70psi
 Recommended operating pressure 60psi

*Note: Pressures over 70psi may require that the house have a pressure regulator installed to limit the pressure below 70psi.

- Maximum hot water temperature 120°F
- If the water temperature exceeds 120°F an approved tempering valve

#41943 03/15



INSTALLATION INSTRUCTIONS

Installation Instructions

Note: This mixer fits a maximum bench thickness of 1 5/8" inches and has a 140° spout arc.

- 1. Flush pipe work to ensure it is free from debris.
- Cut a mounting hole 1 3/8" diameter in the desired position for the mixer ensuring there
 is 30 inches of clear vertical space below the hole for free movement of the hose.
 Check there is 5/8" of flat surface around the edge of the hole, and that the handset is
 able to reach where required.
- Remove mixer from packaging. Unscrew mounting nut and remove backing washers
 from the threaded mixer tail. Ensure 'O'ring is sitting in groove at base of mixer and
 lower mixer through mounting hole, position with lever on the right.
- 4. From below the deck install the rubber washer, steel washer and mounting nut and tighten jack screws.
- 5. Install the flexi hoses to the mixer inlets
 - a. Apply grease to o-ring on flexi hoses. (Grease not supplied.)
 - b. Hand tighten hoses only.
 - c. Red tape on mixer inlet indicates the hot water side.
- 6. Install the adaptors supplied to the flexi hoses and make the connection to the supply lines.
 - a. Turn the nut and not the hose. Twisting the hose may cause damage, or low flow.
 - b. Do not over tighten.
 - c. The flexi hoses should have a radius of no less than 3 11/32".
- 7. Turn on water supply and check for leaks.
 - Check handset has been hand tightened to hose.
 - Test operation of handset by pressing button of handset from pour to spray settings.





INSTALLATION INSTRUCTIONS

Care and Maintenance: After use, wipe down with a soft, dry cloth.

For all chrome plated surfaces clean this product with warm soapy water and then dry with a dry soft cloth.

Nickel plated, satin and Inca brass finishes should be cleaned with a soft cloth and warm water. Then dry with a dry soft cloth.

Do not use cream cleaners or cleaning agents containing a corrosive acid or scouring agent including: Softscrub, Comet, Ajax and Bonami, as these may damage the surface of the faucet. Do not use any spray cleaners with ammonia or alcohol like Windex, 409 or Fantastik. Any use of unsuitable cleaning agents causing damage to the surface will not be covered by the warranty.

WARRANTY: Warranty is limited lifetime. See ROHL website for details. (www.rohlhome.com). A basic in-line filter system is required for the house to protect any debris from entering the water supply line to the house (i.e. due to construction or service work on the street water main).



ROHL LLC 3 Parker Irvine, CA 92618 714-557-1933 | www.rohlhome.com