



We're saving some paper.
View your manual online.

dhlifelabs.com/help-support/

Need Help?

1-877-548-9722

9 AM–6 PM, CST, Monday–Friday



Dernier & Hamlyn Inc.
720 Northgate Parkway
Wheeling, IL 60090

*The Sciaire Mini + HEPA uses Plasma Technology.

**Dispose used products according to local regulations.

EPA EST. NO. 99117-CHN-1
MADE IN CHINA



Sciaire Mini + HEPA

QUICK START GUIDE | CAHP-20WC01

Created by nature.
Engineered by science.



Your safety is important to us.

Read all safety instructions before you use the device.



WARNING! TO REDUCE THE RISK OF FIRE, ELECTRIC SHOCK OR INJURY PLEASE ADHERE TO THE FOLLOWING:

- ! This product complies with the maximum allowable concentration of ozone of 0.050 parts per million by volume (ppmv) in a 24 hour period.
- ! Always place device on a firm, flat level surface that is secure. Do not place device where it is likely to be bumped or knocked over.
- ! Do not sit, stand, or place heavy objects on the device.
- ! The device must be in the upright position at all times.
- ! NEVER place containers with liquid or drinks on top of the device. Spilling liquids into it can damage the device and potentially cause electric shock or create a fire hazard.
- ! THIS MACHINE IS NOT INTENDED FOR USE BY CHILDREN. Keep away from small children and pets.
- ! This machine is not intended for use by persons with reduced physical, sensory or reasoning capabilities or lack of experience or knowledge unless they have been given supervision or instruction concerning the use of the machine by a person responsible for their safety.
- ! This machine is intended for household and indoor use only. Do not use outdoors.
- ! Only use the device after fully assembled.
- ! Only use this device with supplied accessories.
- ! Do not allow foreign objects to enter ventilation or exhaust opening as this may cause electric shock or damage to the device. Do not block air outlets or intakes.
- ! Do not cover the machine while in use.
- ! For best performance, place the machine on the floor at least 3 feet from any wall or appliance.
- ! Always follow basic precautions when using device to reduce the risk of fire, electric shock, and personal injury.
- ! Ensure the electrical outlet used with the device is not loose or damaged. A poor electrical connection can result in overheating and damage to the power cord.
- ! To disconnect the device, make sure it is powered off, then grip the plug and pull it from the wall outlet. NEVER pull the cord to unplug it.
- ! Do not use if the power cord or plug is damaged.
- ! Keep the power cord away from hot surfaces.
- ! Do not use if you believe the device has been damaged or is faulty. If the device is not working properly or has been dropped or damaged, contact customer support for repair.
- ! Do not route the power cord under or cover it with carpet. Route the power cord to minimize the possibility that someone could trip over it.
- ! Do not expose the device to moisture: avoid areas where it might come in contact with water such as bathrooms or laundry rooms.
- ! Disconnect all power to the device and turn off all controls before unplugging. Always unplug the machine if not in use and while cleaning.
- ! The device is not user serviceable. Do not attempt to repair the product yourself. In the event of failure, contact customer support for repair or replacement.

Read all safety instructions in the quick start guide, instruction manual, and on device.



Product Overview



1. Control Panel
2. PlasmaShield™ Generators (Internal)
3. PlasmaShield™ Generators (Internal)
4. H13 True HEPA Filter
5. Bottom Cover
6. Power Cord

Quick Start Guide

1

Twist and detach bottom cover.



2

Remove H13 HEPA filter from plastic bag, and install it in device.



3

Replace bottom cover.




4


Connect the AC adapter to the device, plug into an outlet, and press the power button to turn on.




Control Panel




 **Timer**
(2H/4H/8H) Set the timer to have the machine turn off automatically


 **Sleep Mode**
Lowest fan speed level that is ultra-quiet

 **On/Off**
Powers the device on and off


 **Auto Mode**
Blue: Air Quality Good
Yellow: Air Quality Moderate
Red: Air Quality Poor

 **Fan Speed**
(1/2/3) Three fan speeds


 **Plasma On/Off**
Press the icon to toggle the plasma purification function on or off

 **Filter Replacement Indicator**
After changing filter, press for 3 seconds to reset the filter life countdown


Real-Time Air Quality Indicator Ring

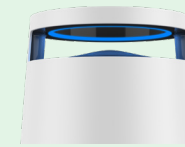

Good

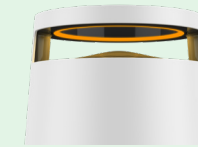

Moderate

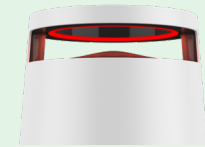

Poor

Cleaning and Maintenance

Always unplug the machine if not in use and while cleaning. When the device is not used for an extended time, store it in a cool dry place. Do not store the device where it might be exposed to excess moisture or direct sunlight. May not operate effectively in freezing temperatures. Use a dry cloth to clean the exterior of the device. Do not use any chemicals or cleaners.

Cleaning the Air Quality Sensor

The inlet for the air quality sensor is located at the back of the machine as shown. The inlet should be cleaned every 2 months using a vacuum or with a cotton swab that has been lightly moistened with clean water.

