



Dishwashers

FGBD2431K F/W/B

24" Built-In



Signature Features



Quietest Dishwasher in Its Class¹

A quiet performance every time.



Effortless™ Dry

Get the best drying performance in its class² with Effortless™ Dry.



Real Stainless Steel

Real stainless steel with a protective coating that reduces fingerprints and smudges so it's easy to clean.



Express-Select™ Controls

Easily select options with the touch of a button.

Effortless Performance

- 4 Wash Cycles
- Low-Rinse Aid Indicator
- 5 Wash Levels

Performance-Driven Style

- Slimline Control Panel with Digital Display
- Tall Tub Design
- White Interior

SpaceWise™ Design

- Upper Rack -
- 2 Cup Shelves
- Stemware Holders

More Easy-To-Use Features

- Delay Start (2-4-6 Hours)
- Hi-Temp Wash Option
- Heat /No Heat Dry
- Removable Stainless Steel Filter
- Stainless Steel Food Disposer
- Controls Lock

ENERGY STAR®
NSF® International
Certification



Overall Exterior Dimensions

Height	33-1/2" - 35"
Width	24"
Depth	25"

Available in:



Stainless
(F)




White
(W)



Black
(B)

¹Based on published manufacturer specifications for plastic interior dishwashers.

²Based on industry standard dryability testing using Effortless™ Dry; plastic interior dishwashers.

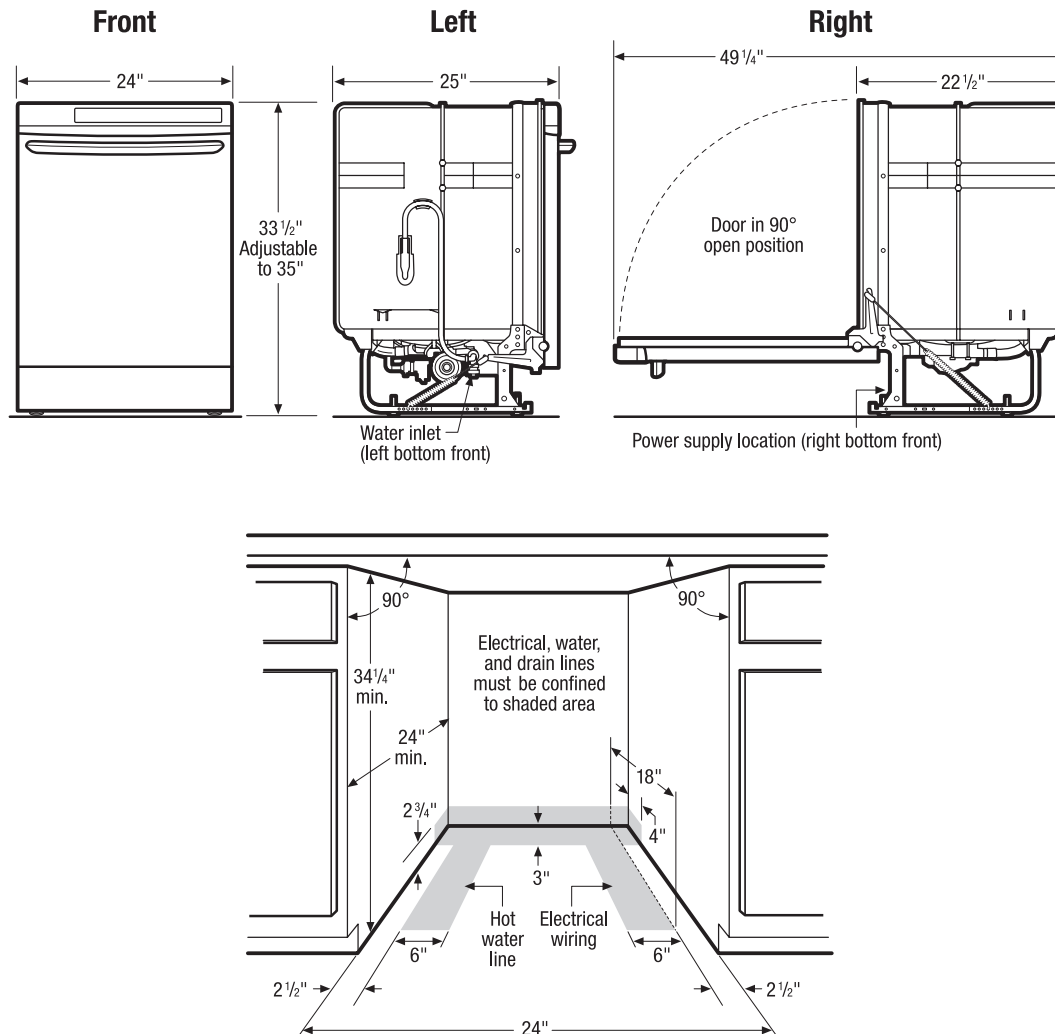

Dishwasher Specifications

- Product Shipping Weight (approx.) – 72 Lbs.
- Voltage Rating – 120V/60 Hz/15 Amps (*maximum 20 Amps if connected with disposer*)
- Connected Load (kW Rating) @ 120 Volts = 1.44 kW
(For use on adequately wired 120V, dedicated circuit having 2-wire service with a separate ground wire. Appliance must be grounded for safe operation.)
- Amps @ 120V = 10 Amps
- Always consult local and national electric & plumbing codes.
- Water Pressure – Hot water line to dishwasher must provide between 20 and 120 pounds per square inch (psi).
- Make sure location has right drain, water and electrical outlets to make connections.
- Keep back free of drain, water & electrical supply.

- Electrical and water supplies should enter cabinet opening on floor, or through back or side walls, as shown in shaded areas.
- Connections preferably located toward left side of dishwasher. Do not cross drain, water or electrical lines in front of motor, blower or frame.
- When installing adjacent to wall, cabinet or other obstruction that extends beyond front edge of unit, allow 2" minimum clearance between opened door and obstruction.
- When installing at end of cabinet line, sides must be fully enclosed.
- Do not install unit under a cooktop, damage will occur.

Note: For planning purposes only. Refer to Product Installation Guide on the web at frigidaire.com for detailed instructions.