



Top-Loading Washer


PRODUCT MODEL NUMBERS

WTW4900X, WTW5500X, WTW5550X,
WTW5600X, WTW5640X, WTW5700X,
WTW4800X, WTW4950X, WTW4850X,
WTW4930X

Electrical: A 120 volt, 60 Hz., AC only, 15- or 20-amp, fused electrical supply is required. A time-delay fuse or circuit breaker is recommended. It is recommended that a separate circuit serving only this washer be provided.


DRAIN SYSTEM

Floor standpipe drain system

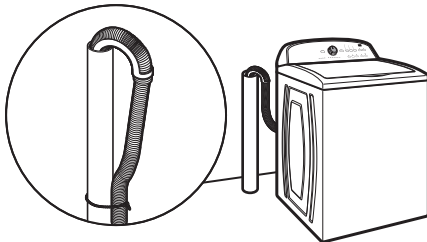


Minimum diameter for a standpipe drain: 2" (51 mm).
Minimum carry-away capacity: 17 gal. (64 L) per minute.
Top of standpipe must be at least 39" (990 mm) high;
install no higher than 96" (2.44 m) from bottom of washer.
If you must install higher than 96" (2.44 m), you will need
a sump pump system.

Wall standpipe drain system

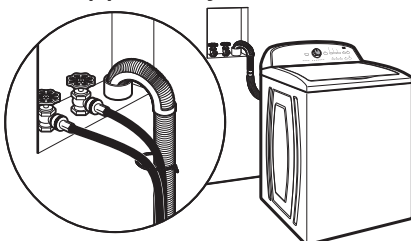


See requirements for floor standpipe drain system.

Floor drain system

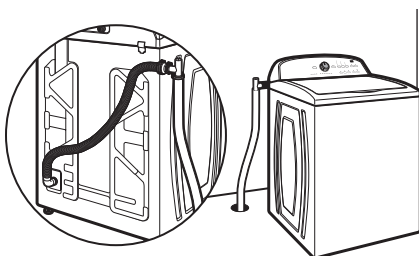

Floor drain system requires additional parts.
Minimum siphon break: 28" (710 mm) from
bottom of washer.

Laundry tub drain system

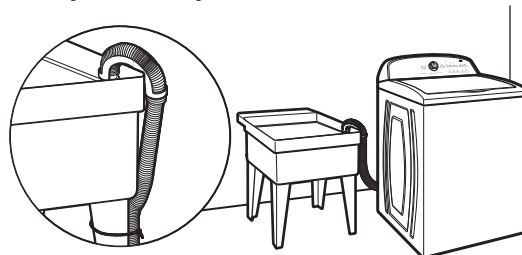


Minimum capacity: 20 gal. (76 L).
Top of laundry tub must be at least
39" (990 mm) above floor; install
no higher than 96" (2.44 m) from
bottom of washer.


IMPORTANT: To avoid siphoning,
no more than 4.5" (113 mm) of drain
hose should be inside standpipe or
below the top of wash tub. Secure
drain hose with cable tie.

OVERALL DIMENSIONS

Washer dimensions

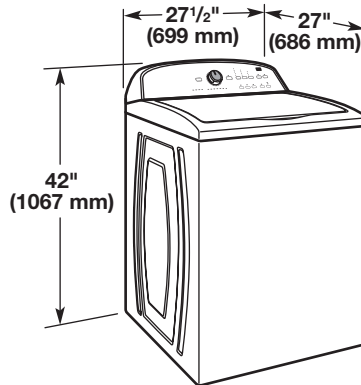

For closet installation, with a door,
the minimum ventilation openings
in the top and bottom of the door
are required. Louvered doors with
equivalent air ventilation openings
are acceptable.

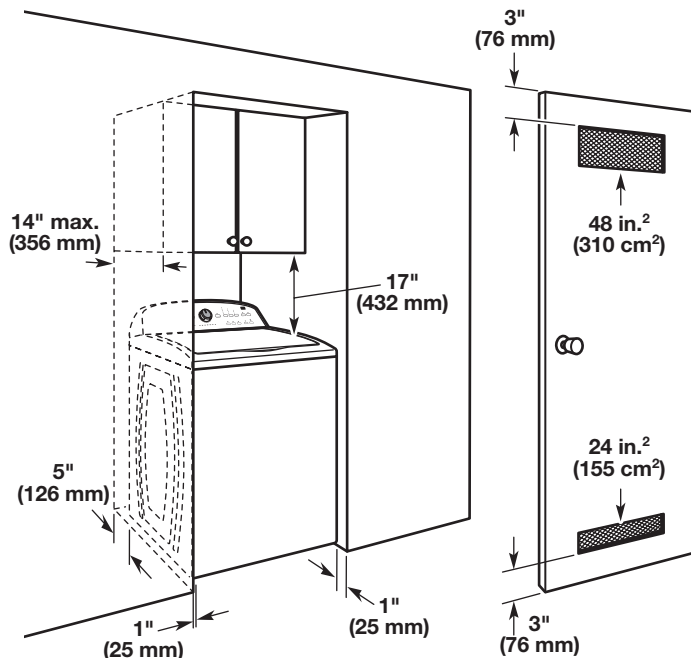

Dimensions show recommended spacing allowed, except for closet door ventilation openings which are minimum required. This washer has been tested for installation with spacing of 0" (0 mm) clearance on the sides. Consider allowing more space for ease of installation and servicing, and spacing for companion appliances and clearances for walls, doors, and floor moldings. Add spacing of 1" (25 mm) on all sides of washer to reduce noise transfer. If a closet door or louvered door is installed, top and bottom air openings in door are required.