

# Installation Instructions

## Self-Cleaning Radiant Electric Slide-In Range

JSP47, JSP57, JS968

If you have questions, call 1.800.GE.CARES or visit our website at: [www.GEAppliances.com](http://www.GEAppliances.com)


### Before You Begin

Read these instructions carefully and completely.



- **IMPORTANT**—Save these instructions for local inspector's use.
- **IMPORTANT**—Observe all governing codes and ordinances.

- **Note to Installer**—Be sure to leave these instructions with the consumer.
- **Note to Consumer**—Keep these instructions for future reference.
- Proper installation is the responsibility of the installer and product failure due to improper installation is NOT covered under warranty.
- **NOTE**—This appliance must be properly grounded.


### Parts Included

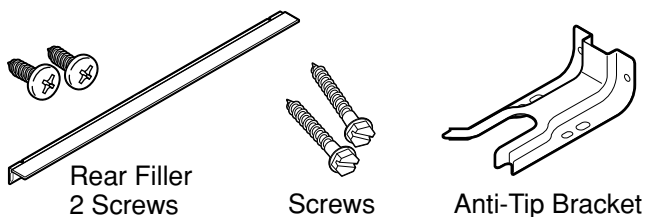

### Materials Needed

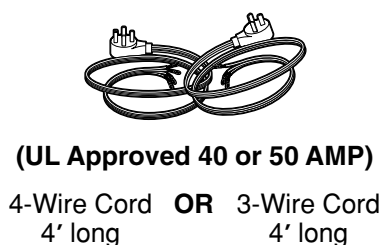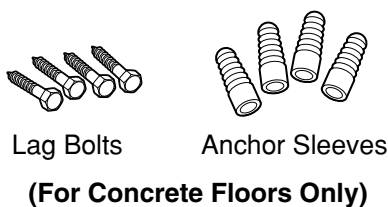

### Tools You Will Need

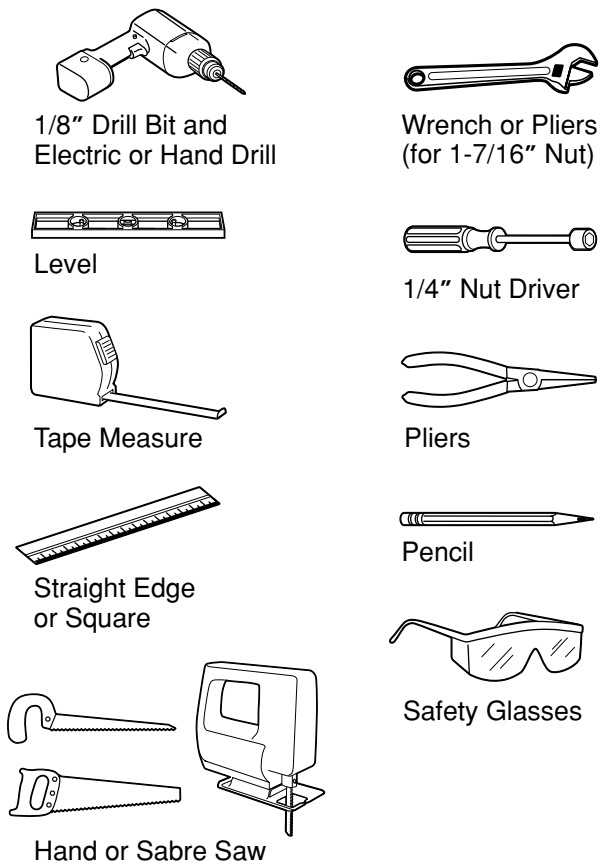

# Installation Instructions

## IMPORTANT SAFETY INSTRUCTIONS

### For Your Safety



**WARNING:** For personal safety, remove house fuse or open circuit breaker before beginning installation. Failure to do so could result in serious injury or even death.

All rough-in and spacing dimensions must be met for safe use of your range. Electricity to the range can be disconnected at the outlet without moving the range if the outlet is in the preferred location (remove lower drawer).

To reduce the risk of burns or fire when reaching over hot surface elements, cabinet storage space above the cooktop should be avoided. If cabinet storage space is to be provided above the cooktop, the risk can be reduced by installing a range hood that sticks out at least 5" beyond the front of the cabinets. Cabinets installed above a cooktop must be no deeper than 13".

Be sure your appliance is properly installed and grounded by a qualified technician.



**WARNING:** To reduce the risk of tipping, the appliance must be secured by properly installing the Anti-Tip bracket packed with the appliance.



#### WARNING

- All ranges can tip
- Injury to persons could result
- Install anti-tip bracket packed with range
- See Installation Instructions

If you pull the range out and away from the wall for any reason, make sure the Anti-Tip bracket is engaged when the range is pushed back against the wall.

### Electrical Requirements

This appliance must be supplied with the proper voltage and frequency, and connected to an individual, properly grounded branch circuit, protected by a circuit breaker or fuse having amperage as noted on rating plate. (Rating plate is located above the storage drawer on the oven frame.)

We recommend you have the electrical wiring and hookup of your range connected by a qualified electrician. After installation, have the electrician show you where your main range disconnect is located.

Check with your local utilities for electrical codes which apply in your area. Failure to wire your range according to governing codes could result in a hazardous condition. If there are no local codes, your range must be wired and fused to meet the requirements of the National Electrical Code, ANSI/NFPA No. 70—Latest Edition. You can get a copy by writing:

National Fire Protection Association  
Batterymarch Park  
Quincy, MA 02269

Effective January 1, 1996, the National Electrical Code requires that new, but not existing, construction utilize a four-conductor connection to an electric range. When installing an electric range in new construction, a mobile home, recreational vehicle or an area where local codes prohibit grounding through the neutral conductor, follow the instructions in the section on NEW CONSTRUCTION AND FOUR-CONDUCTOR BRANCH CIRCUIT CONNECTION.

You must use a three-wire, single-phase A.C. 208Y/120 Volt or 240/120 Volt, 60 hertz electrical system. If you connect to aluminum wiring, properly installed connectors approved for use with aluminum wiring must be used.

# Installation Instructions

## ✓ Pre-Installation Checklist

### ✓ Inspect Installation Location

Refer to alternate construction section for the following non-standard installations.

**a. Counter opening extends to the wall:**

Maintop Filler (supplied with the range.) (See page 13, section AA, for Installation Instructions) or Backguard (Kit JXS36XX or JXS39SS). See page 13.

**b. Counter height greater than 36-3/4":**

Lower Trim Slide-In (Kit JXS56XX).

**c. One side is not enclosed by a cabinet:**

Bodyside (Kit JXS76XX).

**d. Island Installation:**

To provide an optimum installation, the top surface of the countertop must be level and flat (lie on the same plane) around the 3 sides that are adjacent to range cooktop. Proper adjustments to make the top flat should be made or gaps between the countertop and range cooktop may occur. Forcing the cooktop to fit may cause excessive gaps and could break the glass and void the warranty.

To obtain Kits:


- a. Visit GE Web Site (See page 1)
- b. Call GE Answer Center (See page 1)
- c. Contact Dealer

### ✓ Move range indoors in front of cabinet opening.

(Do not use hand trucks when moving the unpackaged range. Cooktop glass may be broken.)

### ✓ Protect the kitchen floor! Flatten and place a piece of the shipping carton in front of the installation location to protect the flooring.

### ✓ Do not remove the protective channel from the sides of the glass cooktop, if applicable, until later in the installation.

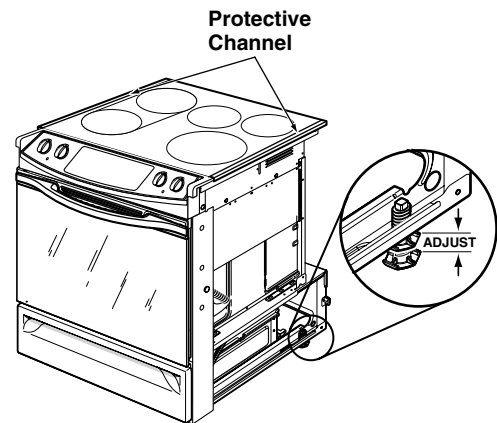

### ✓ Carefully, tilt the range to access the range leveling legs. Use an adjustable wrench to screw leveling legs out so that glass support flanges clear top of countertop.


# Installation Instructions

## ✓ Pre-Installation Checklist cont.

Door removal is not a requirement for installation of the product, but is an added convenience. To remove the door:


✓ Open the oven door as far as it will go.

✓ Push both hinge locks down toward the door frame, to the unlocked position. This may require a flat blade screwdriver.

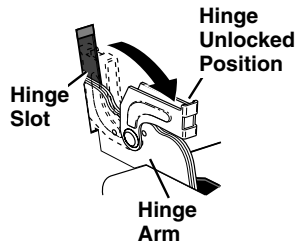


**DO NOT LIFT THE DOOR  
BY THE HANDLE!**

✓ Place hands on both sides of the door, and close the oven door to the removal position. This is half way between the broil stop and fully closed.

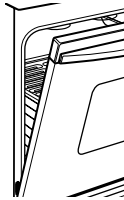

✓ Lift door up and out until the hinge arms clear the slots.

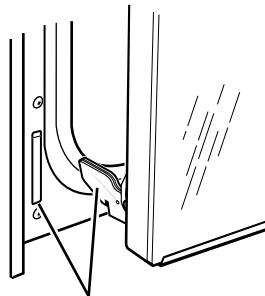

Hinge Clears Slot


**NOTE: The oven door is very heavy. Be sure you have a firm grip before lifting the oven door off the hinges. Use caution once the door is removed. Do not lay the door on its handle. This could cause dents or scratches.**

✓ Remove packing materials. Remove labels on door, plastic on trim and panel, and all tape around the range.

## Storage Drawer Removal

✓ Pull the drawer out until it stops.


✓ Lift the front of the drawer until the stops clear the guides.

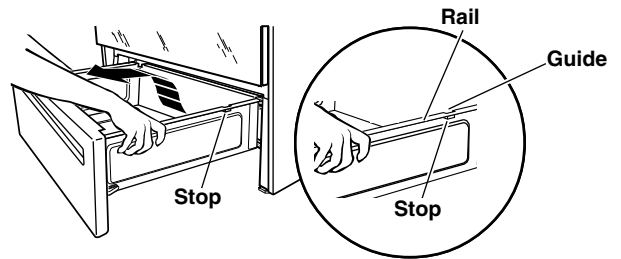

✓ Pull forward and remove the drawer.

# Installation Instructions


## A Pre-Installation Cutout and Required Clearances

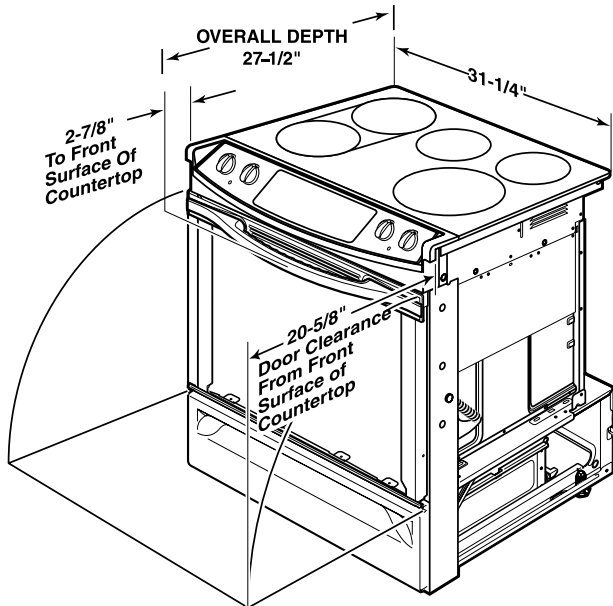

If cabinets are placed less than 30" above the range, see Alternate Construction, section AF, on page 14.

**NOTE:** Product meets UL requirements for 0" clearance to back and side walls.



Wall coverings, counters and cabinets around range must withstand heat (up to 194°F) generated by the range.

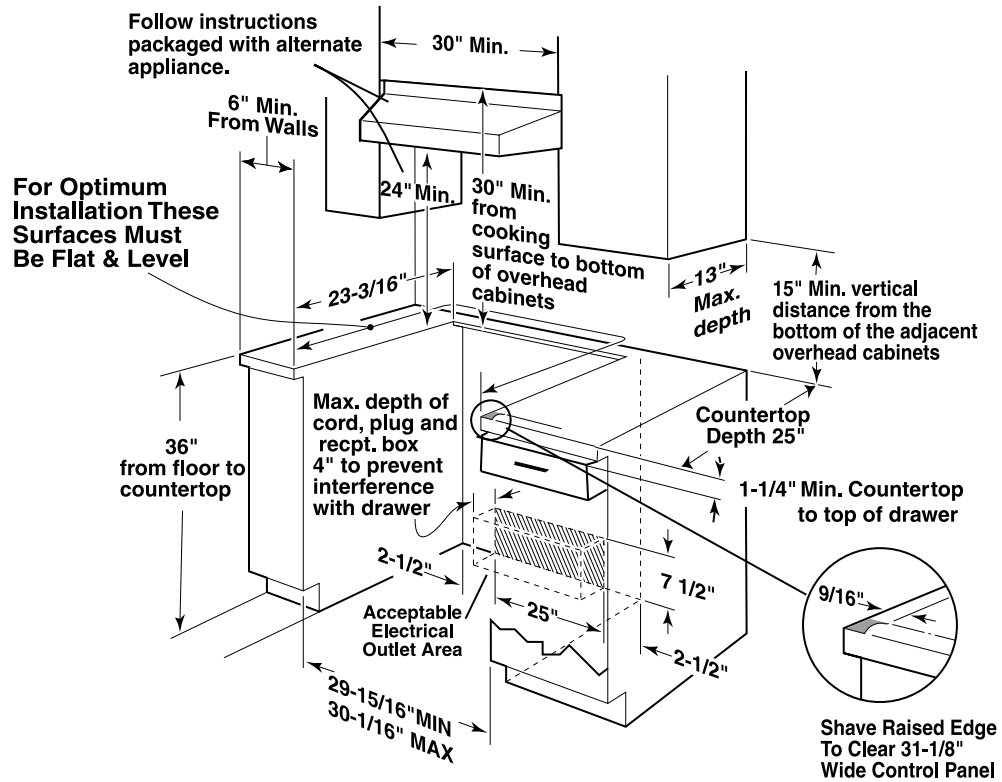

# Installation Instructions

## B Standard Installation

### STANDARD INSTALLATION

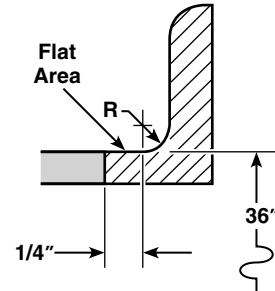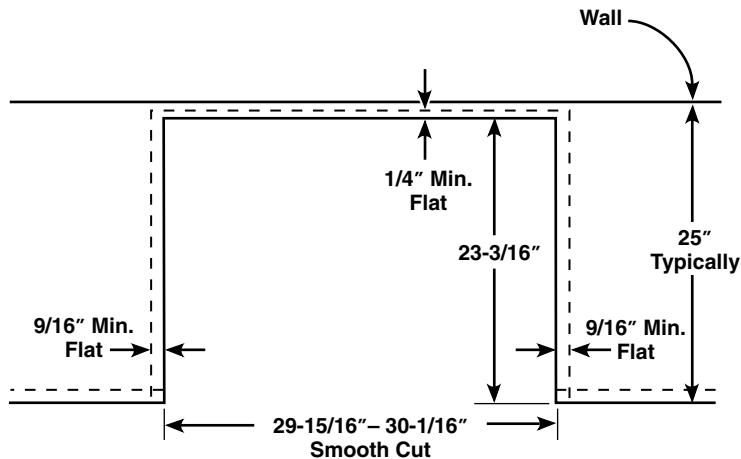


If the construction of your cabinet cannot provide a 1/4" flat area at the back of the countertop opening, consider changing the countertop to accommodate this dimension. See Alternate Construction section. If the area is not flat, excess tension may be applied to the glass cooktop, causing breakage and voiding the warranty.

- B1** Center the 30" wide opening over the adjacent cabinets and mark with a straight edge.
- B2** Using a straight edge, mark the back line at 23-3/16" from the front edge of the counter.
- B3** Be careful not to damage the adjacent cabinets while cutting the countertop. Use a hand or saber saw to make straight smooth cuts.
- B4** Remove countertop raised edge, if incorporated. (See illustration on page 5)


# Installation Instructions

## C Electrical Connections

- C1** Remove wire cover at lower rear of range.

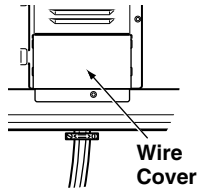

- C2** When using a power cord, remove the knockout in the connection plate with pliers, as required by the size of the strain relief or clamp supplied with cord.

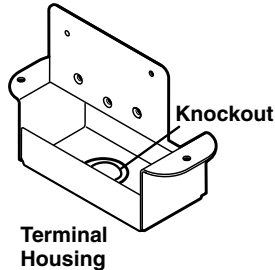

- C3** Insert power cord through hole in the terminal housing, engage and tighten strain relief clamp, leaving enough wire length to attach terminals to terminal block.




### BREAKER OR FUSE SIZE

240V	40 Amps +
208V	40 Amps +

+ **NOTE: Check Local Codes for required breaker size.**

### C4 Making the Electrical Connection

Remove the wire cover (on the back of the range) by removing 2 screws, using a 1/4" nut driver.

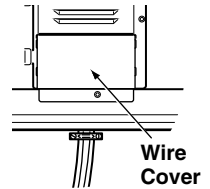

**Do not discard these screws.**

**NOTE: When reinstalling the wire cover, make sure that wires do not become pinched between the wire cover and the housing.**

### C5 All New Constructions, Mobile Homes, Recreational Vehicles and Installations Where Local Codes Do Not Allow Grounding Through Neutral

These will require a four-wire flexible cord kit. If the range is rated between 8,750 and 16,500 watts, a range cord rated for 40 amps with a 125/250 minimum voltage rating is required. If the range is rated between 16,501 and 22,500 watts, a range cord rated for 50 amps with a 125/250 volts is required.

For existing construction, a three-wire flexible cord kit may be used; the same ratings apply as described above.

- When using a cord kit rated at 40 amps, remove the knockout in the connection plate. You must use a clamp or strain relief to hold the cord.
- Terminations must be either closed loop terminals or open-end spade lugs.
- On some models, a filter capacitor may be connected between the black and white leads on the junction block.

# Installation Instructions

## C Electrical Connections cont.



### C6 New Construction and Four-Conductor Branch Circuit

**NOTE:** For installations where grounding through the neutral conductor is prohibited.


Follow instructions below if your cord is 4-wire:

- a. Remove the screws on the terminal block. Do not remove terminal block.

50 Amp 4-Wire




Remove 3 screws

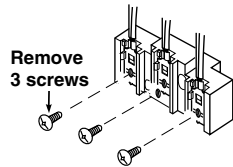


- b. Remove the green ground screw. Then remove the ground strap and discard it.

Remove and Discard Ground Strap

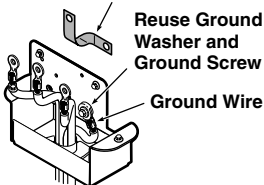

Terminal Block

- c. Attach the green or bare wire below the terminal block with the green ground screw and washer that were removed earlier.



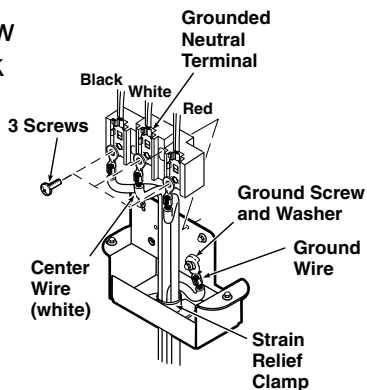


- d. Connect the red and black wires to the outside terminals. The white wire must be connected to the center terminal.

### C7 Follow instructions below if your cord is 3-wire:

The power cord center wire must be connected to middle terminal on block. Attach remaining wires securely. Do not remove ground strap.

50 Amp 3-Wire

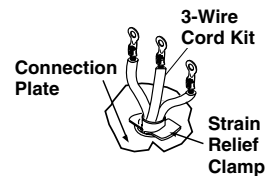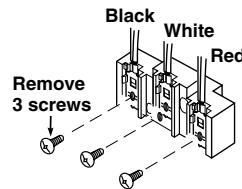




# Installation Instructions

## D Installing the Anti-Tip Bracket

### D1 Locating the Bracket


- Decide whether the bracket will be installed on the right or left side of the range opening.
- Place the bracket as shown in Fig. 1.

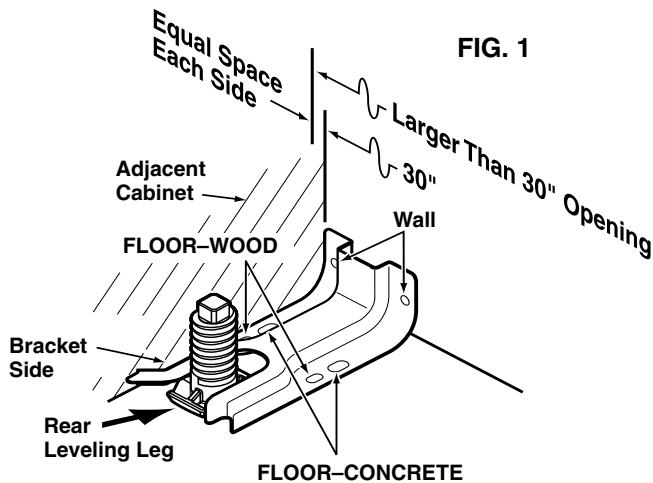

### D2 Installing the Bracket in Wood or Concrete

#### INSTALLATION—WOOD CONSTRUCTIONS

- Locate the centers of the 4 holes identified in Fig. 1 as Floor-Wood and Wall.
- Drill a 1/8" pilot hole through the pre-marked areas. Note the angle of the wall screw in Fig. 2.
- Mount the Anti-Tip bracket with the 4 screws provided.

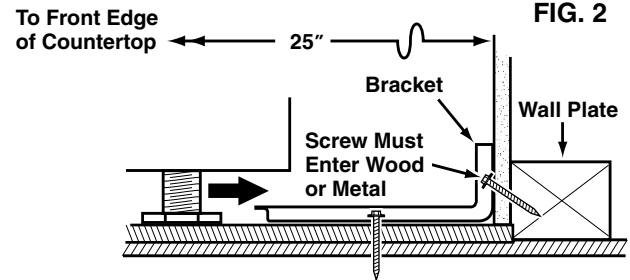

#### INSTALLATION—CONCRETE CONSTRUCTIONS


- For concrete installation, you will need two 1/4" x 1-1/2" lag screws and two sleeve anchors.
- Locate the center of the 4 holes identified in Fig. 1 as Floor-Concrete and Wall. Drill the recommended size holes in each.
- Install the sleeve anchors into the predrilled concrete holes and install the lag and wall screws through the Anti-Tip bracket. Make sure the screws are securely tightened.

# Installation Instructions


## E Installing The Range

### Slide Range Into Opening

- E1** Position the range in front of the cabinet opening.
- E2** Make sure that the glass which overhangs the countertop clears the countertop. If necessary, raise the unit by lowering the leveling legs.
- E3** Push while lifting the range into the opening, until the range is within 2" of engaging the anti-tip bracket.
- E4** Remove the protective trim from the side of glass (if provided).
- E5** Using the adjustable pliers or wrench, carefully screw in the back leveling leg until the glass overhang comes to rest on the countertop.

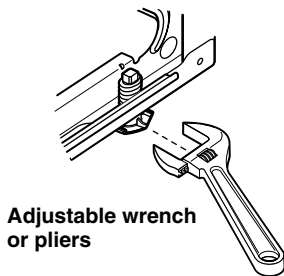


- E6** Then carefully screw in the front two leveling legs (similar to E5) until the glass overhang touches the countertop.
- E7** Carefully push the range into the opening until the countertop fully engages the control panel. The back glass overhang should cover the cutout opening.

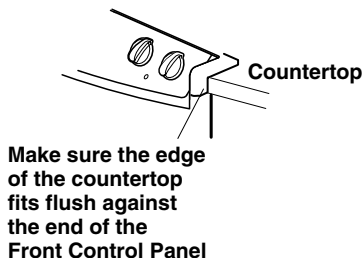


### Slide Range Into Opening (cont.)

- E8** Plug the range cord into the receptacle. Locate the cord in the back of the range in a manner that it will not touch or be moved by the drawer.

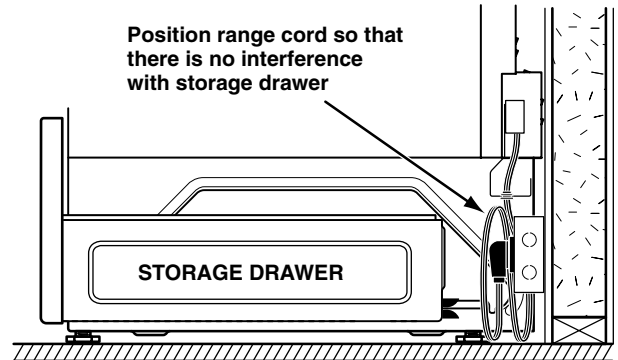

### Final Check of the Anti-Tip Bracket

- E9** When installation is complete and the range is in place, check to be sure that the rear leveling leg is fully inserted into the slot of the Anti-Tip Bracket.

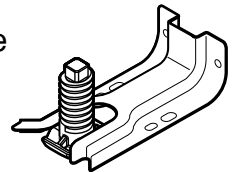

# Installation Instructions

## E Installing The Range cont.


### Replacing the Oven Door

**NOTE:** The oven door is heavy. You may need help lifting the door high enough to slide it into the hinge slots. Do not lift the door by the handle.

- E10** Lift the oven door by placing one hand on each side. The door is heavy, so you may need help. Do not lift the door by the handle.




- E11** With the door at the same angle as the removal position (halfway between the closed and broil stop position), seat the notch of the hinge arm into the bottom edge of the hinge slot. The notch of the hinge arm must be fully seated into the bottom of the slot.

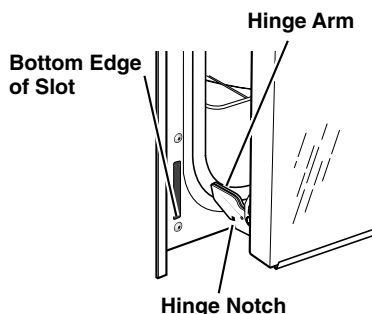

- E12** Open the oven door as far as it will open.

- E13** Push the hinge locks up against the front frame of the oven cavity, to the locked position.

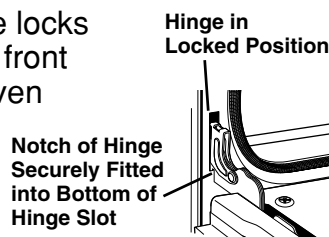

- E14** Close the oven door.


### Replacing the Storage Drawer

- E15** Place the drawer rail on the guides.

- E16** Push the drawer in until it stops.


- E17** Lift the front of the drawer and push in until the stops clear the guides.

- E18** Lower the front of the drawer and push in until it closes.

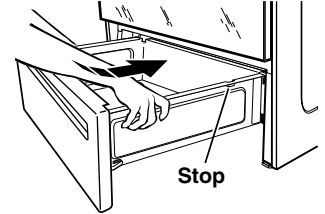


### SPECIAL INSTRUCTIONS IF YOU ARE HAVING PROBLEMS WHILE REPLACING THE STORAGE DRAWER

#### If Drawer Won't Close:

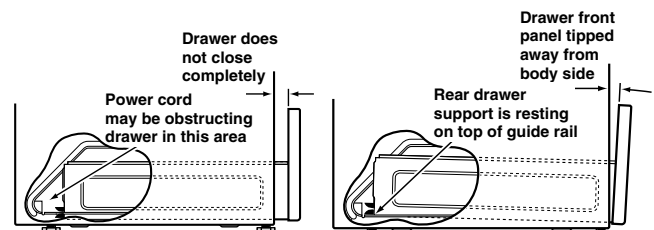

Remove and replace, making sure the power cord is not obstructing the drawer and/or the rail is in the guide.

#### If Drawer Is Crooked:

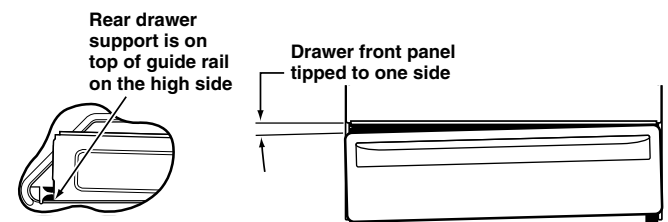




Remove and replace, making sure the rail is in the guide.



# Installation Instructions

---

## Final Checklist

-  Check to make sure the circuit breaker is closed (Reset) or the circuit fuses are replaced.
-  Be sure power is in service to the building.
-  Check to be sure that all packing materials and tape on metal panel (if applicable) under control knobs and drawer have been removed.

## Operation Checklist

-  Check to make sure the Clock display is energized. If a series of horizontal red lines appear in the display, disconnect power immediately. Recheck the range wiring connections. If change is made to connections, retest again. If no change is required, have building wiring checked for proper connections and voltage. It is recommended that the clock be changed if the red lines appear.
-  Push down and turn any one of the four surface knobs to “MED” setting to observe that the element glows within 15 seconds. Turn the knob off when glow is detected. If the glow is not detected within the time limit, recheck the range wiring connections. If change is required, retest again. If no change is required, have building wiring checked for proper connections and voltage.

# Installation Instructions

## Alternate Construction


### **AA** Optional Maintop Filler or Backguard Kit

If counter opening extends to the wall, it will require Maintop Filler Kit (supplied with the range) or Backguard Kit (JXS36XX or JXS39SS) to close the gap.

**NOTE:** If the countertop is greater than 25", it will show a gap between the backguard and wall or between filler kit and the wall.

If the countertop is less than 25", a gap will occur between the countertop front and the control panel ends (see section E7).


If you are using the optional backguard kit, refer to the backguard kit instructions for installation details.

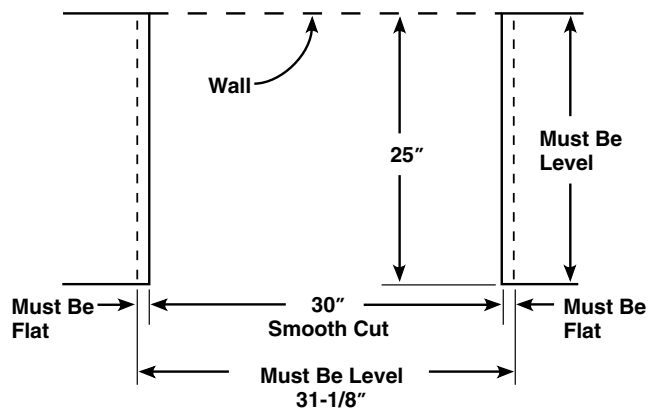

If you use the filler kit, place the metal filler piece supplied with the range to the back of the range as shown in the figure below. Start the 2 screws into the upper holes at the outside rear of the range above the louvers and through the slots in the trim, holding the filler piece centered on the maintop frame and pushing upward to close the gap between the bottom of the glass and the filler trim.

When the trim is set in the proper position, tighten the 2 mounting screws. The top of the trim should be located below the top surface of the glass to prevent pots, pans and skillets from damaging the painted parts.

Refer to the Standard Installation of the Range beginning on page 6.

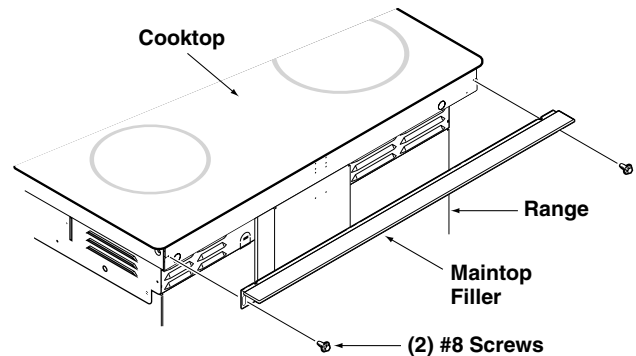


# Installation Instructions

## Alternate Construction cont.

### **AB** Countertops Higher Than 36-1/2"

If countertop height is between 36-1/2" and 38", a lower trim kit (JXS56XX) is recommended. Refer to the kit instructions for installation details.

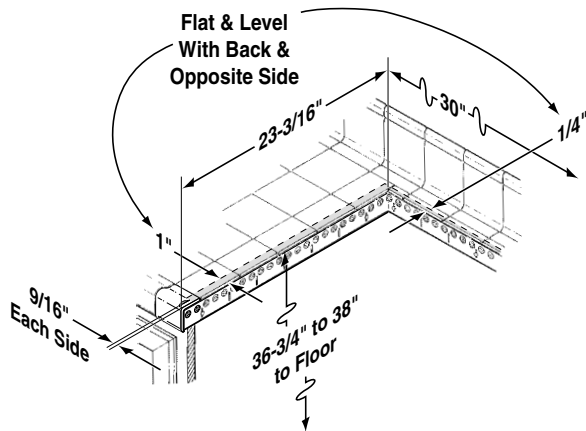

### **AC** For Non-Built-In Installation (End of Cabinet Location)

When installing the range at the end of a cabinet section which will expose the unfinished side of the range, use Body Side Kit (JXS76XX). Refer to the kit instructions for installation details.

### **AD** Island Installation

Attach the Anti-Tip bracket per instructions in section D, making sure that the rear of the bracket is 25" from the front of the countertop.

Be aware that the screws provided are long and may penetrate through the back of the island cabinets. In this event, use shorter screws (not provided) or the screws provided should be used in the floor (see Section D for Wood/Concrete Floor Installation).

**Do not use Backguard Kit JXS36XX or JXS39SS.**

### **AE** For Cabinet Openings Approximately 30-3/8"

If range is installed in cabinet opening approximately 30-3/8", the Vertical Side Trim Kit (JXS86XX) should be used to cover gaps between range sides and cabinet. Refer to the kit instructions for installation details.

### **AF** Cabinets Over The Range Less Than 30"

If a 30" clearance between cooking surface and overhead combustible material or metal cabinets cannot be maintained, protect the underside of the cabinets above the cooktop with not less than 1/4" insulating millboard covered with sheet metal not less than 0.0122" thick.

## NOTES

This image shows a blank sheet of white paper with horizontal ruling lines. The lines are evenly spaced and run across the width of the page. There are no margins, text, or other markings on the paper.

## NOTES

This image shows a blank sheet of white paper with horizontal ruling lines. The lines are evenly spaced and run across the width of the page. There are no margins, text, or other markings on the paper.