



D0346C001-00  
USA/CAN  
Version C

# Quick Setup Guide



HL-L2465DW / DCP-L2640DW / DCP-L2647DW / DCP-L2660DW /  
HL-L2480DW / MFC-L2760DW / MFC-L2807DW / MFC-L2820DW / MFC-L2820DWXL /  
MFC-L2880DW / MFC-L2900DW / MFC-L2900DWXL / MFC-L2980DW

Read the *Product Safety Guide* first, then read this *Quick Setup Guide* for the correct installation procedure.  
Not all models are available in all countries.



EN




The latest manuals are available at the Brother support website:  
[support.brother.com/manuals](http://support.brother.com/manuals)

## Unpack the machine and check the components

Remove the protective tape or film covering the machine and the supplies.

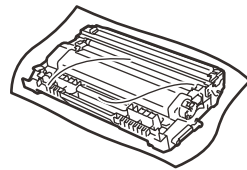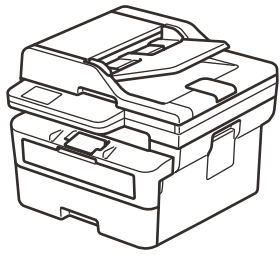


**Toner Cartridge and Drum Unit Assembly**

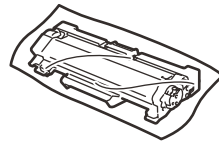


**Toner Cartridge Replacement**  
(MFC-L2820DWXL /  
MFC-L2900DWXL only.  
Save for later use.)



**AC Power Cord**



**Quick Setup Guide**




**Product Safety Guide**


### NOTE:

- Manuals in Spanish for this model are available at [support.brother.com](http://support.brother.com).  
Manuales en Español para este modelo están disponibles en [support.brother.com](http://support.brother.com).
- The components included in the box may differ depending on your country.
- The available connection interfaces vary depending on the model.  
If you use a wired connection, you must purchase the correct cable for the interface you want to use.
  - **USB cable**  
We recommend using a USB 2.0 cable (Type A/B) that is no more than 6 feet (2 meters) long.
  - **Network cable (for wired network models only)**  
Use a straight-through Category 5 (or greater) twisted-pair cable.
- The screens and images in this *Quick Setup Guide* show the MFC-L2820DW.
- Save all packing materials and the box in case you must ship your machine.


## 1 Remove the packing materials and install the toner cartridge and drum unit assembly

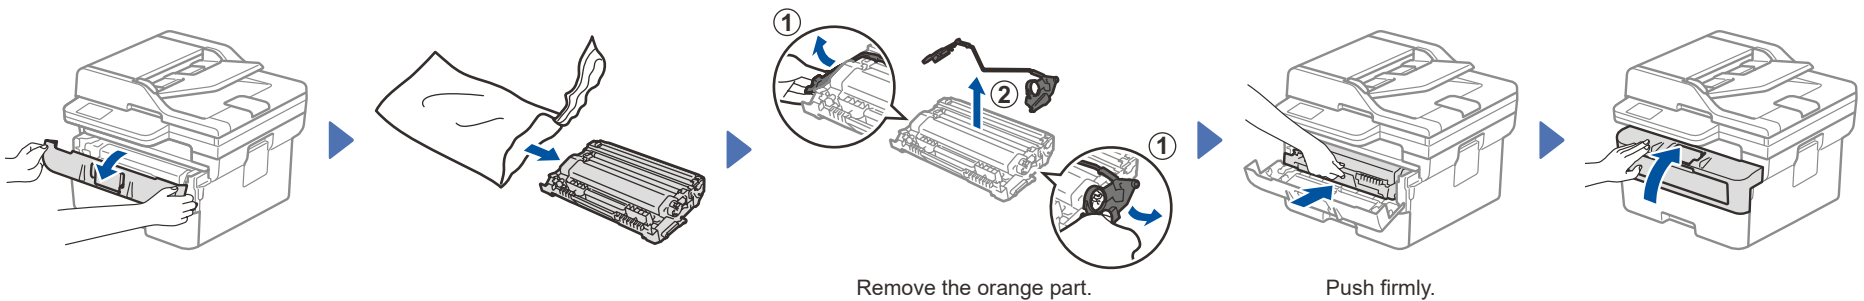

## 2 Load paper in the paper tray

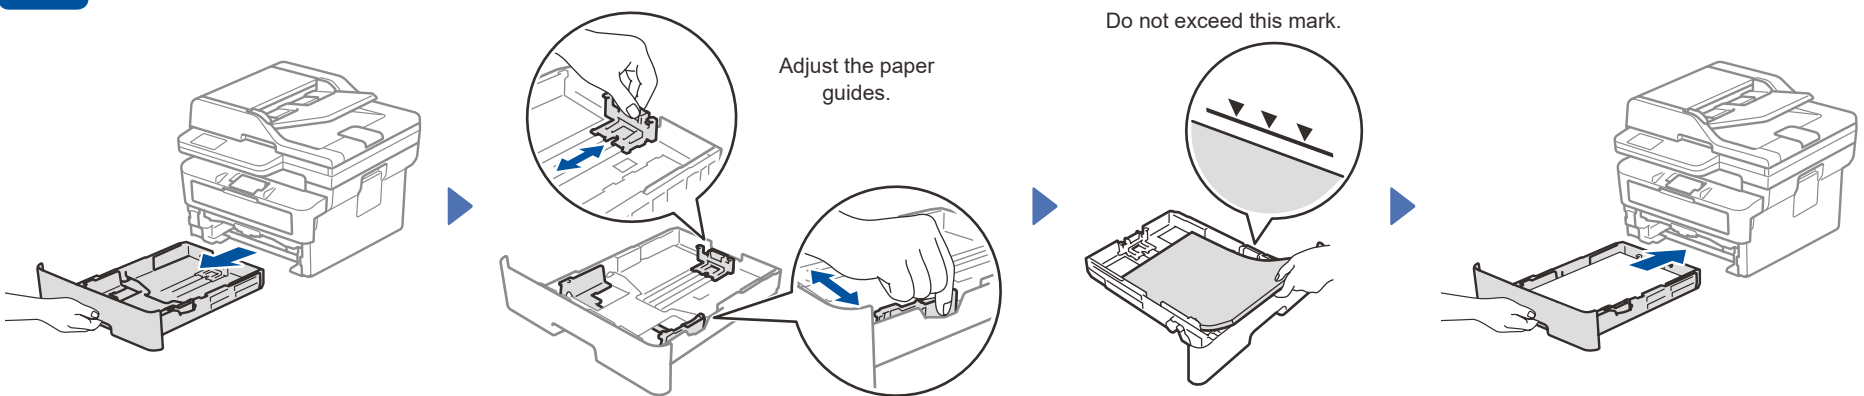

## 3 Connect the power cord and turn the machine on

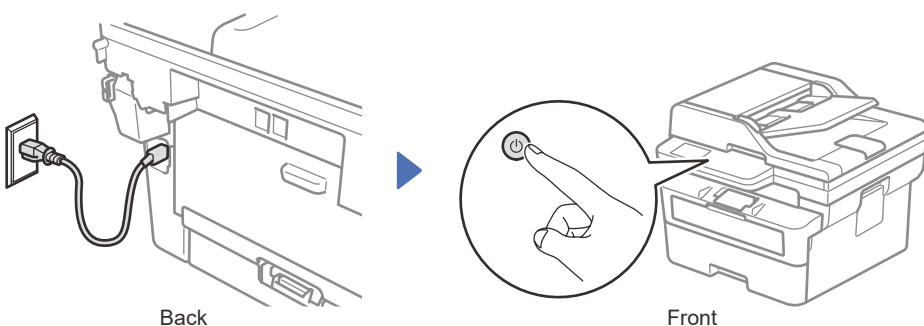

**NOTE:**  
Before connecting the power cord, locate the Serial Number label on the back or side of the machine. Record this number for product registration and warranty support.

## 4 Select your language (if needed)

■ For LCD models:

1. Press **Menu**.
2. Press **▲** or **▼** to display [Initial Setup], and then press **OK**.
3. Press **▲** or **▼** to display [Local Language], and then press **OK**.
4. Press **▲** or **▼** to select your language, and then press **OK**.
5. Press **Stop/Exit**.


■ For touchscreen models:

1. On the machine's touchscreen, press **[Settings]** > **[All Settings]** > **[Initial Setup]** > **[Local Language]**.
2. Select your language.
3. Press **[Home]**.



## 5 Connect the telephone line cord (For MFC models)

If you do not plan to use the fax feature on this machine, go to step **7**.

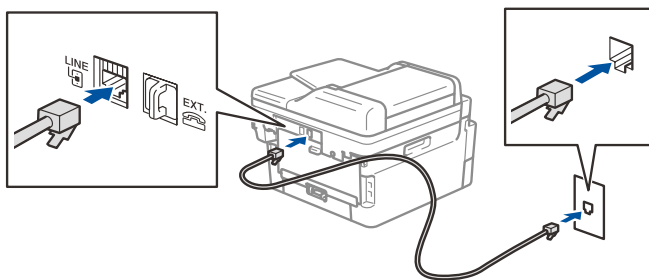

## 6 Configure the machine for faxing (For MFC models only)

If you do not plan to use the fax feature on this machine, go to step **7**.

### NOTE:

- For more information on using the fax feature, see the *Online User's Guide*.
- Your machine is programmed to automatically receive faxes. To change this default mode, see the *Online User's Guide*.

■ For LCD models:

### A. Set the date and time

#### Date

1. Press **Menu**, **0**, **1**, **1**.
2. Enter the date using the dial pad, and then press **OK** to confirm.
  1. Last two digits for the year.
  2. Two digits for the month.
  3. Two digits for the day.

#### Clock Type

1. Press **▲** or **▼** to select [12h Clock] or [24h Clock], and then press **OK**.

#### Time

1. Enter the time using the dial pad, and then press **OK**. (12h Clock only)  
Press **▲** or **▼** to select [AM] or [PM], and then press **OK**.
2. Press **Stop/Exit**.

### B. Set the Station ID

1. Press **Menu**, **0**, **2**.
2. Set your fax or telephone number and your name.

■ For touchscreen models:

### A. Set the date and time

Press **☰** [Settings] > [All Settings] > [Initial Setup] > [Date & Time], and then set the date and time you want.


### B. Set the Station ID

Press **☰** [Settings] > [All Settings] > [Initial Setup] > [Station ID], and then set your fax or telephone number and your name.

## 7 Connect your computer or mobile device to your machine

Follow these steps to complete the setup using one of the connection types available on your machine.

Visit [setup.brother.com](http://setup.brother.com) to download and install Brother software.

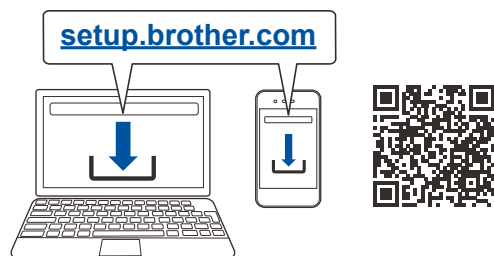

Follow the on-screen instructions and prompts.

### Setup Finished

You can now print and scan using your machine.

### Important Notice for Network Security:

The default password to manage this machine's settings is located on the back of the machine and marked "Pwd". We recommend immediately changing the default password to protect your machine from unauthorized access.

Before connecting your machine to a 5 GHz Wi-Fi® network, confirm the channels that your machine supports. Go to [support.brother.com/g/d/a5m6/](http://support.brother.com/g/d/a5m6/), select your product, and then click **Download** for more information.



### Can't Connect? Check the following:


Wireless network	Restart your wireless access point or router. If this is not possible, go to the next step.	Restart your machine and computer, and then go to <b>7</b> .	If still unsuccessful, go to <b>8</b> .
Wired network USB connection	Disconnect the cable.		If still unsuccessful, visit <a href="http://support.brother.com">support.brother.com</a> for FAQs and Troubleshooting.

## 8 Manual wireless setup (Wireless models)

If the wireless setup is unsuccessful, set up the connection manually.


Find your SSID (Network Name) and Network Key (Password) on your wireless access point or router and write them in the table provided below.

SSID (Network Name)	
Network Key (Password)	

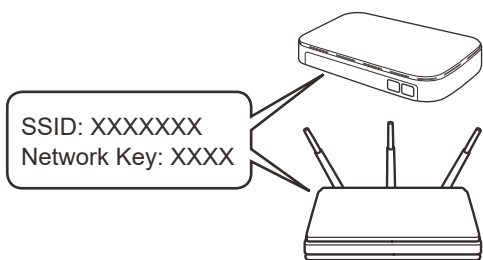

■ For LCD models:  
Press **Menu**, and then select [Network] > [WLAN (Wi-Fi)] > [Find Network]. Follow the LCD instructions.

■ For touchscreen models:  
Press **☰** > [Find Wi-Fi Network]. Follow the touchscreen instructions.

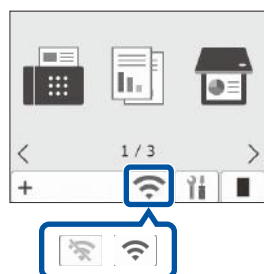

Select the SSID (Network Name) for your access point or router and enter the Network Key (Password).

• For LCD HL/DCP models:  
Press and hold (or press repeatedly) **▲** or **▼** to select one of the following characters:  
0123456789abcdefghijklmnopqrstuvwxyz  
ABCDEFGHIJKLMNOPQRSTUVWXYZ  
(space)!"#%&'()\*+,-./:;<=>?@[\\]^\_`{|}~

When the wireless setup is successful, the touchscreen/LCD displays [Connected].

Go to **7** to install software.

If you cannot find this information, ask your network administrator or wireless access point or router manufacturer.

If the setup is unsuccessful, restart your Brother machine and your wireless access point or router, and repeat **8**. If still unsuccessful, visit [support.brother.com](http://support.brother.com).