


Instructions for Replacing the Magnet Processor Board

1. Locate the magnet processor board located under the playfield. (See picture below).
2. Unplug the (3) pin and (12) pin connectors from the magnet processor board.
3. Remove the (4) $\frac{1}{4}$ " Hex head screws securing the magnet processor board and take the board off of the playfield.
4. Install the new magnet processor board in place of the old board using the (4) screws mentioned in step (3).
5. Reconnect the (3) pin and (12) connectors to the magnet processor board.

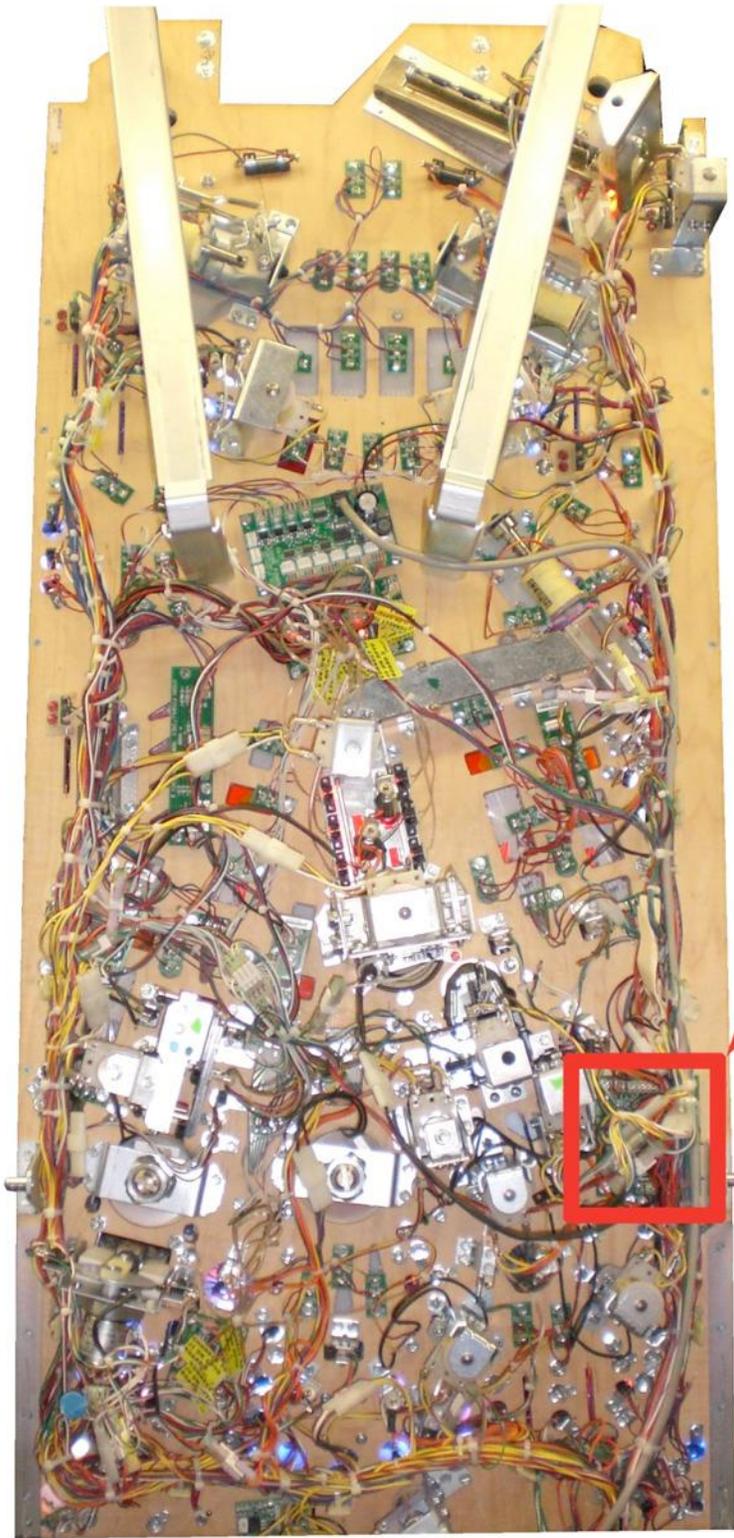

LOCATION OF THE
MAGNET PROCESSOR BOARD