

huupe mini


Model Number: 900-00002

Quick Start Guide



Power Requirement


Power is provided through the included USB-C brick: 12V@3A (PDO), 9V@3A (PDO). Other power sources could damage the unit.

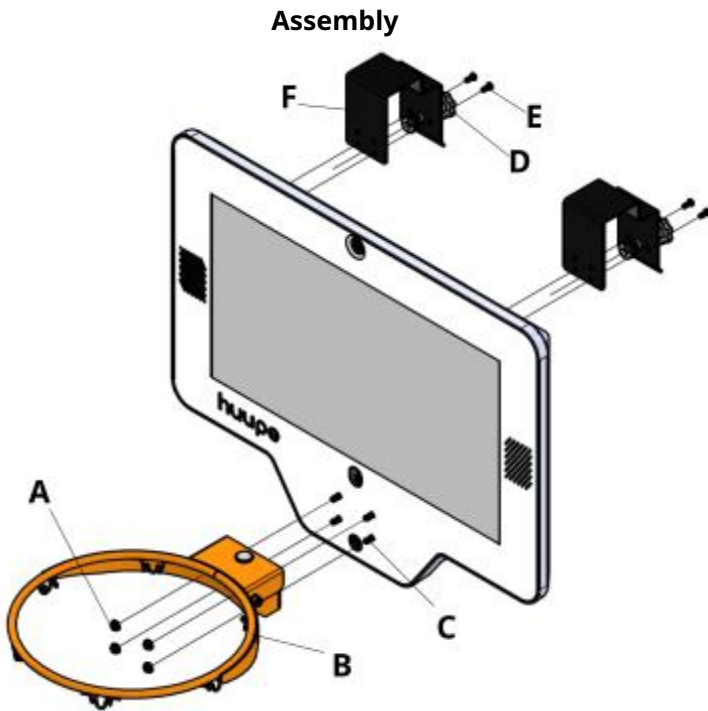

STEP 1: Attach the Rim to the Backboard

Use the provided wrench (H) to remove the preassembled nuts (C) on the backboard. Remove with a counter-clockwise turn.

Fit up the rim (B) onto the preassembled bolts (C) on the backboard. Attach the rim using the wrench (H) by rotating the nuts (A) clockwise onto the preassembled bolts on the backboard.

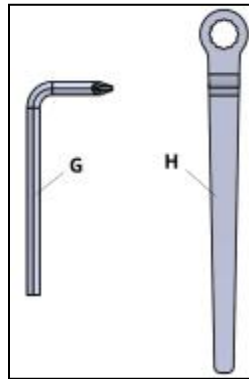

STEP 2: Attach the Door Hooks


Attach the door hooks (F) to the backboard with the provided screws (E) and screw tool (G), Turn clockwise to attach and tighten.

STEP 3: Install the Backboard Over the Door

Hang the door hooks over the top of the desired door and hand-tighten the knob (D) by turning clockwise on each hook to hold it securely in place.

STEP 4: Turn the Unit ON

Hold the power button for 2 seconds until the blue light on the power button appears, then wait for the display to turn on.

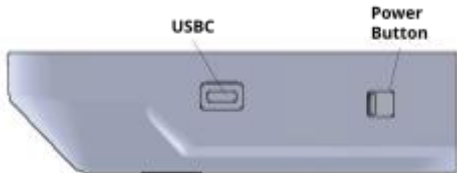

Please note, it may take 10-45 seconds for the display to turn on. As long as the blue light on the power button is on, the display will soon turn on.

STEP 5: Inflate the Ball

Pump until the ball feels firm and you feel resistance.



TURNING ON THE huupe mini

Power On	Hold the button for 2 seconds until power button light turns blue
Power Off	Hold the button for 7 seconds

Power Button Indicator Light Behavior

- Blinking Blue light: Low battery, device under 5%
- Solid Blue light: System ON
- Solid Red light: System OFF but charging
- Light OFF: System OFF

DO NOT!



Warning: DO NOT ATTEMPT TO DUNK OR HANG FROM THE RIM. THESE ACTIONS COULD PERMANENTLY DAMAGE THE UNIT AND CAUSE INJURY TO THE USER.

Warning: DO NOT POKE THE SENSORS. THIS ACTION COULD CAUSE THE SENSORS TO FAIL.







Warning: WE RECOMMEND NOT PLAYING WHILE THE UNIT IS CHARGING.

OPTIMAL SHOT-TRACKING

- For optimal shot-tracking performance, use ONLY the huupe ball and net. Generic balls and nets will not be tracked with the software. Replacement ball and net are available from the website.
- Make sure sensors are not obstructed.

Remote Control Overview



	Power ON/OFF
	Shot Tracking Overlay
	Back
	Home
	Input
	Mute/Unmute Volume

Pairing the Remote Control

On the remote control, hold the VOL + and - button for 3 seconds to enter remote pairing mode

Technical Specifications

- USB-C Input: 12V=3A (PDO), 9V=3A (PDO).
- Battery: 10000mAh Lithium Polymer rechargeable battery will support up to 4 hours of gameplay.
- Audio: Includes a high-fidelity integrated Codec with 5W stereo speakers for a high quality audio experience.
- Backboard size: 22" x 17" x 1.5".
- Display: HD+ Display protected by 5mm Polycarbonate sheet. RF: Dual-band WiFi 5
- Bluetooth 5.0 supported with WPA3 encryption

Troubleshooting

- huupe mini is not turning on.
 - Allow the device to charge for 30-60 minutes
- huupe mini is not responding
 - Force shutdown by holding the power button for 7 seconds

Warranty

huupe warrants that the huupe mini provided by huupe will be free from defects in workmanship and materials for a period of 12 months from the date of original delivery.

Contact Information

Contact us at customerservice@huupe.com

ISED non-interference disclaimer

This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions:

1. This device may not cause interference.
2. This device must accept any interference, including interference that may cause undesired operation of the device.

This device complies with the Canadian ICES-003 Class B specifications. CAN ICES-003(B) / NMB-003 (B).

ISED RF Exposure Statement

This equipment complies with ISED RSS-102 radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with a minimum distance 20 cm (8 inches) between the radiator and any part of your body. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

FCC Compliance Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:


1. this device may not cause harmful interference, and
2. this device must accept any interference received, including interference that may cause undesired operation. Please note that changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

RF Exposure Statement

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter. In order to avoid the possibility of exceeding the FCC radio frequency exposure limits, this equipment should be installed and operated with a minimum distance 20 cm (8 inches) between the antenna and your body during normal operation. Users must follow the specific operating instructions for satisfying RF exposure compliance.

Device Label Location

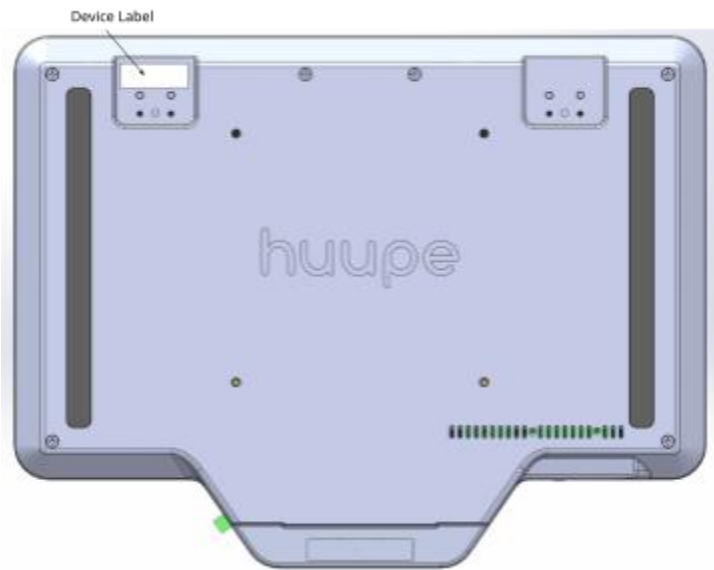

**For more information on huupe,
please visit
www.huupe.com**