

GARMIN®

APPROACH® J1

Junior GPS Golf Watch



**Owner's
Manual**

Table of Contents

Introduction.....	4	Starting an Activity.....	15
Device Overview.....	4	Stopping an Activity.....	15
Getting Started.....	4	Going for a Pool Swim.....	15
Using the Watch Features.....	4	Swim Terminology.....	15
Pairing Your Phone.....	4	Outdoor Activities.....	15
Charging the Watch.....	5	Clocks.....	16
Product Updates.....	5	Setting an Alarm.....	16
Setting Up Garmin Express™.....	5	Using the Stopwatch.....	16
Playing Golf.....	6	Starting the Countdown Timer.....	16
Forward Tees.....	6	Activity Tracking.....	17
Changing Your Tee Box Level.....	6	Auto Goal.....	17
Setting Your Personal Par.....	7	Move IQ®.....	17
Golf Menu.....	7	Activity Tracking Settings.....	17
Viewing the Green.....	7	Turning Off Activity Tracking.....	17
Viewing Hazards and Layups.....	7	Customizing Your Device.....	18
Changing Holes.....	8	Changing the Watch Face.....	18
Keeping Score.....	8	Editing a Watch Face.....	18
Enabling Statistics Tracking.....	8	Golf Settings.....	18
Score History.....	9	Activities and App Settings.....	18
Viewing Round Information.....	9	Customizing the Data Screens.....	19
Automatic Shot Detection.....	9	Satellite Settings.....	19
Viewing Measured Shots.....	9	Activity Alerts.....	19
Adding a Shot Manually.....	10	User Profile.....	20
Ending a Round.....	10	Setting Up Your User Profile.....	20
Connectivity.....	11	Gender Settings.....	20
Phone Connectivity Features.....	11	System Settings.....	20
Turning Off the Bluetooth® Phone		Time Settings.....	20
Connection.....	11	Customizing the Display Settings...	21
Turning On and Off Phone Connection		Battery Manager Settings.....	21
Alerts.....	11	Changing the Units of Measure.....	21
Phone Apps and Computer		Resetting All Default Settings.....	21
Applications.....	11	Advanced Settings.....	21
Garmin Golf™ App.....	11	Device Information.....	22
Garmin Connect™.....	11	About the AMOLED Display.....	22
Glances.....	13	Changing the Band.....	22
Viewing the Glance Loop.....	13	Specifications.....	23
Controls.....	14	Battery Information.....	23
Customizing the Controls Menu.....	14	Device Care.....	23
Activities.....	15	Cleaning the Watch.....	23
		Long-Term Storage.....	23
		Viewing Device Information.....	23
		Viewing E-label Regulatory and	
		Compliance Information.....	24

Troubleshooting..... 25

Getting More Information..... 25
Maximizing Battery Life..... 25
My device cannot find nearby golf
courses..... 25
Is my phone compatible with my
watch?..... 25
My phone will not connect to the
watch..... 25
My device is in the wrong language.... 25
My device displays the wrong units of
measure..... 25
Restarting Your Watch..... 26
Acquiring Satellite Signals..... 26
 Improving GPS Satellite Reception.. 26
Activity Tracking..... 26
 My daily step count does not
 appear..... 26
 My step count does not seem
 accurate..... 26
 The step counts on my watch and my
 Garmin Connect™ account don't
 match..... 26

Appendix..... 27

Data Fields..... 27



Introduction

⚠ WARNING

See the *Important Safety and Product Information* guide in the product box for product warnings and other important information.


Device Overview






- ① **Touchscreen:** Tap to choose an option in a menu.
Swipe up or down to scroll through the glance loop and menus ([Glances, page 13](#)).
- ② **Top button** : Press to start a round of golf.
Press to start an activity or app.
Hold to turn the watch on.
Hold to view the controls menu and watch settings ([Controls, page 14](#)).
- ③ **Bottom button** : Press to return to the previous screen.
During an activity, press to record a lap or rest.

Getting Started

When using your watch the first time, you should complete these tasks to set it up and get to know the basic features.


- 1 Hold  to turn on the watch ([Device Overview, page 4](#)).
- 2 Answer the device prompts.
- 3 Pair your phone ([Pairing Your Phone, page 4](#)).
Pairing your phone gives you access to scorecard syncing, phone alerts, and more.
- 4 If necessary, follow the on-screen instructions to complete the initial setup.
- 5 Charge the watch completely so that you have enough charge for a round of golf ([Charging the Watch, page 5](#)).

Using the Watch Features

- From the watch face, swipe up or down to scroll through the glance loop.
Your watch comes preloaded with glances that provide quick information. More glances are available when you pair your watch with a phone.
- From the watch face, press , and select  to start an activity or open an app.
- Hold , and select **Settings** to adjust settings and customize the watch face.

Pairing Your Phone

To use the connected features on your watch, you must pair it directly through the Garmin Golf™ app, instead of from the Bluetooth® settings on your phone. Your Garmin Golf account must be approved and managed by a parent or guardian ([Garmin Connect™ Child Accounts, page 12](#)).

- 1 During the initial setup on your watch, select ✓ when you are prompted to pair with your phone.
NOTE: If you previously skipped the pairing process, you can hold , and select **Settings > Phone > Pair Phone**.
- 2 Scan the QR code with your phone.
- 3 With the help of your parent or guardian, follow the on-screen instructions to complete the pairing and setup process.

Charging the Watch

WARNING

This device contains a lithium-ion battery. See the *Important Safety and Product Information* guide in the product box for product warnings and other important information.

NOTICE

To prevent corrosion, thoroughly clean and dry the contacts and the surrounding area before charging or connecting to a computer.

- 1 Plug the cable ( end) into the charging port on your watch.



- 2 Plug the other end of the cable into a USB charging port.
The watch displays the current battery charge level.

Product Updates

On your computer, install Garmin Express™ (www.garmin.com/express). On your phone, install the Garmin Golf™ app.

This provides easy access to these services for Garmin® devices:



- Software updates
- Course updates
- Data uploads to Garmin Golf
- Product registration

Setting Up Garmin Express™

- 1 Connect the device to your computer using a USB cable.
- 2 Go to garmin.com/express.
- 3 Follow the on-screen instructions.


Playing Golf

Before you play golf, you should charge the watch ([Charging the Watch](#), page 5).

- 1 Press .
- 2 Select **Play Golf**.
The device locates satellites, calculates your location, and selects a course if there is only one course nearby.
- 3 If the course list appears, select a course from the list.
- 4 Select  to keep score.
- 5 Confirm the suggested tee box level, or select a tee box or tee box level ([Forward Tees](#), page 6).
The hole information screen appears.



①	The current hole number.
②	Par for the current hole. Your personal par is displayed if the setting is enabled (Setting Your Personal Par , page 7).
③	The distance to the middle of the green.
④	The recommended club for the next shot if the Club Tracking setting is enabled (Golf Settings , page 18).
⑤	The distance of the previous shot (Automatic Shot Detection , page 9).
⑥	The pace of play timer. You should hit your shot before the countdown is complete and the colored ring disappears from the screen.

- 6 Select an option:
 - Swipe up or down to view the green, along with distances to the front, middle, and back of the green.
NOTE: Because pin locations change, the watch calculates the distance to the front, middle, and back of the green, but not the actual pin location.
 - Press  to open the golf menu ([Golf Menu](#), page 7).


When you move to the next hole, the watch automatically transitions to display the new hole information.

Forward Tees

You are assigned a tee box level during initial setup based on your age. This can help make any golf course playable, regardless of age or skill level. Higher levels are placed at the on-course tee boxes, while lower levels are placed closer to the hole down the fairway. The watch provides on-screen directions to the tee location for tee boxes on the fairway. You can manually change your tee box level ([Changing Your Tee Box Level](#), page 6)

Changing Your Tee Box Level

A tee box level is automatically assigned to you during initial setup based on your age. You can manually change the tee level, or disable the feature.

- 1 Hold .

2 Select **Settings** > **Golf Settings** > **Forward Tees**.

3 Select a tee level.

NOTE: Lower tee levels are closer to the hole down the fairway.

Setting Your Personal Par

The personal par setting adds a specified number of strokes to the par for every hole. This can be useful in setting a realistic goal for less experienced players.

1 Hold .

2 Select **Settings** > **Golf Settings** > **Personal Par**.

3 If necessary, select **Status** > **On**.

4 Select **Personal Par Per Hole**.

5 Select an option.

Golf Menu

During a round, you can press  to access additional features in the golf menu.

Hazards and Layups: Shows the location and distance to a layup or to the front and back of a hazard ([Viewing Hazards and Layups, page 7](#)).

View Green: Displays the shape and layout of the green. You can also move the pin location to get a more precise distance measurement ([Viewing the Green, page 7](#)).

Change Hole: Changes the current hole ([Changing Holes, page 8](#)).

Change Green: Changes the green when more than one green is available for a hole ([Changing Holes, page 8](#)).

Scorecard: Opens the scorecard for the round ([Keeping Score, page 8](#)).

NOTE: If scoring is not enabled, you can select Start Scoring.

Round Info: Shows your score, statistics, and step information ([Viewing Round Information, page 9](#)).

Last Shot: Shows the distance of your previous shot recorded with the Garmin AutoShot™ feature ([Viewing Measured Shots, page 9](#)). You can also manually record a shot ([Adding a Shot Manually, page 10](#)).

Add Back Nine: Adds the back nine holes when playing on a nine-hole course, allowing you to play a full round.

Settings: Customizes the golf activity settings ([Activities and App Settings, page 18](#)).


End Round: Ends the current round ([Ending a Round, page 10](#)).

Viewing the Green

While playing a round, you can take a closer look at the green and move the pin to get a more precise distance measurement.

1 Press .

2 Select **View Green**.

3 Tap or drag  to move the pin location.

The distances on the hole information screen are updated to reflect the new pin location. The pin location is saved for only the current round.


Viewing Hazards and Layups

While playing a round, you can view the hazards and layups for the current hole.

1 Press .

2 Select **Hazards and Layups**.


NOTE: A map of the current hole appears.

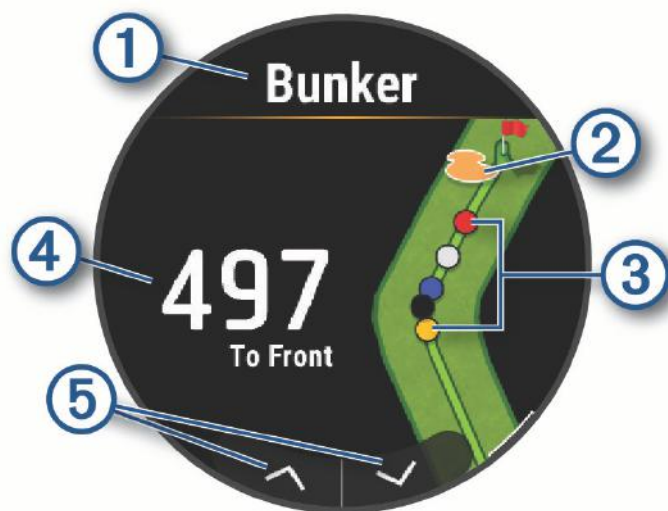


①	The type of hazard or the layup distance.
②	The location of the hazard or layup.
③	Layup distances to the pin in meters or yards: red is 100, white is 150, blue is 200, and yellow is 250.
④	The distance to the layup or to the front and back of the hazard.
⑤	Arrows you can tap to view other hazards or layups for the hole.

Changing Holes

You can change holes manually from the hole view screen.


- 1 Press .
- 2 Select **Change Hole**.
- 3 Swipe up or down to select the hole.

Keeping Score

- 1 Press .
 - 2 Select **Scorecard**.
- NOTE:** If scoring is not enabled, you can select Start Scoring.
- 3 Select a hole.
 - 4 Select $-$ or $+$ to set the score.

Enabling Statistics Tracking

When you enable statistics tracking on the device, you can view your statistics for the current round ([Viewing Round Information, page 9](#)). You can compare rounds and track improvements using the Garmin Golf™ app.

- 1 Hold .
- 2 Select **Settings > Golf Settings > Stat Tracking > Status > On**.
- 3 If necessary, select **Fairway Tracking** to track fairway information.

Recording Statistics

Before you can record statistics, you must enable statistics tracking ([Enabling Statistics Tracking, page 8](#)).

- 1 From the scorecard, select a hole.
 - 2 Enter the total number of strokes taken, including putts, and select **Next**.
 - 3 Set the number of putts taken, and select **Next**.
- NOTE:** The number of putts taken is used for statistics tracking only and does not increase your score.
- 4 If necessary, select an option:

NOTE: If you are on a par 3 hole or have the Fairway Tracking setting disabled (*Enabling Statistics Tracking, page 8*), fairway information does not appear. Fairway information also does not appear when using Approach® sensors.

- If your ball hit the fairway, select ↑.
- If your ball missed the fairway, select ← or →.

5 If necessary, enter the number of penalty strokes.

Score History


While playing a round, your watch displays a color ① next to each of the hole indicators ② along the bezel to indicate your score on that hole.



Color	Strokes Taken Relative to Par
Purple	5 or more over
Pink	4 over
Red	3 over
Orange	2 over
Yellow	1 over
Green	Par
Light blue	1 under
Dark blue	2 or more under

Viewing Round Information

During a round, you can view your score, statistics, and step information.


- 1 Press .
- 2 Select **Round Info**.
- 3 Swipe up.

Automatic Shot Detection

Your watch features automatic shot detection and recording. Each time you take a shot along the fairway, the watch records your shot distance so you can view it later.

TIP: Automatic shot detection works best when you wear the watch on your leading wrist and make good contact with the ball. Putts are not detected by the watch. To detect putts automatically, you must be paired to an Approach® golf club tracking accessory.

Viewing Measured Shots

- 1 While playing golf, press .
- 2 Select **Last Shot**.
Your last shot distance appears.


NOTE: The distance automatically resets when you hit the ball again, putt on the green, or move to the next hole.

- 3 Select **^** > **View More** to view all recorded shot distances.


NOTE: The distance from the most recent shot also displays on the hole information screen.

Adding a Shot Manually

You can manually add a shot if the device doesn't detect it. You must add the shot from the location of the missed shot.

- 1 Press .
- 2 Select **Last Shot** > **^** > **Add Shot**.
- 3 Select **✓** to start a new shot from your current location.

Ending a Round

- 1 Press .
- 2 Select **End Round**.
- 3 Swipe up.
- 4 Select an option:
 - To save the round and return to watch mode, select **Save**.
 - To edit your scorecard, select **Edit Score**.
 - To discard the round and return to watch mode, select **Discard**.
 - To pause the round and resume it at a later time, select **Pause**.

Connectivity


Connectivity features are available for your watch when you pair with your compatible phone ([Pairing Your Phone](#), page 4).

Phone Connectivity Features

Phone connectivity features are available for your Approach® watch when you pair it using the Garmin Golf™ app ([Pairing Your Phone](#), page 4).

- App features from the Garmin Golf app ([Garmin Golf™ App](#), page 11)
- App features from the Garmin Connect™ app ([Garmin Connect™](#), page 11)
- Glances ([Glances](#), page 13)
- Controls menu features ([Controls](#), page 14)

Turning Off the Bluetooth® Phone Connection

- 1 Hold .
- 2 Select **Settings** > **Phone** > **Status** > **Off** to turn off the Bluetooth phone connection on your Approach® watch. Refer to the owner's manual for your phone to turn off Bluetooth technology on your phone.

Turning On and Off Phone Connection Alerts

You can set the Approach® J1 watch to alert you when your paired phone connects and disconnects using Bluetooth® technology.

NOTE: Phone connection alerts are turned off by default.

- 1 Hold .
- 2 Select **Settings** > **Phone** > **Connected Alerts**.

Phone Apps and Computer Applications

You can connect your watch to multiple Garmin® phone apps and computer applications using the same Garmin account.

Garmin Golf™ App

The Garmin Golf app allows you to upload scorecards from your Approach® J1 device to view detailed statistics and shot analyses. Golfers can compete with each other at different courses using the Garmin Golf app. More than 43,000 courses have leaderboards that anyone can join. You can set up a tournament event and invite players to compete.

The Garmin Golf app syncs your data with your Garmin Connect™ account. You can download the Garmin Golf app from the app store on your phone (garmin.com/golfapp).

Automatic Course Updates

Your Approach® device features automatic course updates with the Garmin Golf™ app. When you connect your device to your smartphone, the golf courses you use most frequently are updated automatically.

Garmin Connect™

When you pair your watch with your phone using the Garmin Golf™ app, a Garmin Connect account is automatically created. The Garmin Golf app syncs your data with your Garmin Connect account. You can download the Garmin Connect app from the app store on your phone.

Your Garmin Connect account allows you to track your fitness and wellness performance and connect with your friends. It gives you the tools to track, analyze, share, and encourage each other. You can record the events of your active lifestyle, including runs, rides, swims, and more.

Store your activities: After you complete and save a timed activity with your watch, you can upload that activity to your Garmin Connect account and keep it as long as you want.

Analyze your data: You can view more detailed information about your fitness and outdoor activities, including time, distance, calories burned, an overhead map view, and pace and speed charts. You can also view customizable reports.

Track your progress: You can track your daily steps, join a friendly competition with your connections, and meet your goals.

Share your activities: You can connect with friends to follow each other's activities or post links to your activities on your favorite social networking sites.

Garmin Connect™ Child Accounts

A parent or guardian can create or approve child accounts for users who are under the digital age of consent. This allows the child to have their own account and pair a device to the app, and it provides the parent or guardian oversight of the child account. The adult account owner has access to the child account's settings and data, and has the ability to receive notifications about the child account's activity. Once the child has reached the age of consent, their account is converted into a standard Garmin Connect account.

Using the Smartphone Apps

After you pair your device with your smartphone (*Pairing Your Phone, page 4*), you can use the Garmin Golf™ and Garmin Connect apps to upload all of your data to your Garmin® account.

- 1 Open the Garmin Golf or Garmin Connect app on your smartphone.

TIP: The app can be open or running in the background.

- 2 Bring your device within 10 m (30 ft.) of your smartphone.
Your device automatically syncs your data with your account.

Updating the Software Using the Smartphone Apps

After you pair your device with your smartphone (*Pairing Your Phone, page 4*), you can use the Garmin Golf™ and Garmin Connect apps to update your device software.

Sync your device with one of the apps (*Using the Smartphone Apps, page 12*).

When new software is available, the app automatically sends the update to your device.

Using Garmin Connect™ on Your Computer

The Garmin Express™ application connects your compatible Garmin® golf watch to your Garmin Connect account using a computer.

- 1 Connect your Garmin golf watch to your computer using the USB cable.
- 2 Go to garmin.com/express.
- 3 Download and install the Garmin Express application.
- 4 Open the Garmin Express application, and select **Add Device**.
- 5 Follow the on-screen instructions.

Updating the Software Using Garmin Express™

Before you can update your watch software, you must download and install the Garmin Express application and add your watch (*Using Garmin Connect™ on Your Computer, page 12*).

- 1 Connect the watch to your computer using the USB cable.
When new software is available, the Garmin Express application sends it to your watch.
- 2 After the Garmin Express application finishes sending the update, disconnect the watch from your computer.
Your watch installs the update.

Glances


Your watch comes preloaded with glances that provide quick information (*Viewing the Glance Loop*, page 13). Some glances require a Bluetooth® connection to a compatible phone.

Name	Description
Golf	Displays golf scores and statistics for your last round.
Steps	Tracks your daily step count, step goal, and data for previous days.
Sunrise and sunset	Displays sunrise, sunset, and civil twilight times.

Viewing the Glance Loop

- 1 From the watch face, swipe up or down.
The watch scrolls through the glance loop and displays summary data for each glance.










- 2 Tap the touchscreen to view more information for the glance.
- 3 Select an option:
 - Swipe up to view details about a glance.
 - Press  to view additional options and functions for a glance.

Controls



The controls menu lets you quickly access watch features and options. You can add, reorder, and remove the options in the controls menu ([Customizing the Controls Menu, page 14](#)).

Hold .

Icon	Name	Description
	Battery Saver	Select to enable the battery saver feature (Battery Manager Settings, page 21).
	Brightness	Select to adjust the screen brightness (Customizing the Display Settings, page 21).
	Clocks	Select to open the Clocks app to set an alarm, timer, or stopwatch (Clocks, page 16).
	Lock Screen	Select to lock the buttons and the touchscreen to prevent inadvertent presses and swipes.
	Power Off	Select to turn off the watch.
	Settings	Select to open the settings menu.
	Time Sync	Select to sync your watch with the time on your phone or using satellites.

Customizing the Controls Menu




You can add, remove, and change the order of the shortcut menu options in the controls menu ([Controls, page 14](#)).

- 1 Hold .
- 2 Select **Edit**.
- 3 Select a shortcut to customize.
- 4 Select an option:
 - To change the location of the shortcut in the controls menu, swipe up or down.
 - To remove the shortcut from the controls menu, select .
- 5 If necessary, select **Add** to add an additional shortcut to the controls menu.





Activities

Starting an Activity

When you start an activity, GPS turns on automatically (if required).









- 1 Press .
- 2 Select .
- 3 Select an activity.
- 4 If the activity requires GPS signals, go outside to an area with a clear view of the sky, and wait until the device is ready.
- 5 Press  to start the activity timer.
The device records activity data only while the activity timer is running.

Stopping an Activity

- 1 Press .
- 2 Select an option:
 - To save the activity, select .
 - To discard the activity, select .
 - To resume the activity, press .

Going for a Pool Swim

NOTE: The touchscreen is not available during swim activities.

- 1 Press .
- 2 Select .
- 3 Select **Pool Swim**.
- 4 Select your pool size, or enter a custom size.
- 5 Press  to start the activity timer.
- 6 Start swimming.
The watch automatically records swim intervals and lengths.
- 7 Press  when you rest.
TIP: You can enable the Auto Rest feature to set the watch to automatically detect when you are resting and create a rest interval.
The rest screen appears.
- 8 Press  to restart the interval timer.
- 9 After you complete your activity, press  to stop the activity timer.
- 10 Select an option:
 - To save the activity, hold .
 - To discard the activity, hold .

Swim Terminology

Length: One trip down the pool.

Interval: One or more consecutive lengths. A new interval starts after a rest.

Stroke: A stroke is counted every time your arm wearing the device completes a full cycle.

Swolf: Your swolf score is the sum of the time for one pool length and the number of strokes for that length. For example, 30 seconds plus 15 strokes equals a swolf score of 45. Swolf is a measurement of swimming efficiency and, like golf, a lower score is better.


Outdoor Activities

The Approach® watch comes preloaded with outdoor activities, such as running and biking. GPS is turned on for outdoor activities.





Clocks

Setting an Alarm




You can set multiple alarms. You can set each alarm to occur once or to repeat regularly.

- 1 Hold .
- 2 Select **Clocks > Alarms > Add Alarm**.
- 3 Enter a time.
- 4 Select the alarm.
- 5 Select **Repeat**, and select an option.
- 6 Select **Label**, and select a description for the alarm.

Using the Stopwatch

- 1 Hold .
- 2 Select **Clocks > Stopwatch**.
- 3 Press  to start the timer.
- 4 Press  to restart the lap timer.
The total stopwatch time continues running.
- 5 Press  to stop the timer.
- 6 Select an option:
 - To reset the timer, swipe down.
 - To save the stopwatch time as an activity, swipe up, and select **Save**.
 - To review the lap timers, swipe up, and select **Review Laps**.
 - To exit the stopwatch, swipe up, and select **Done**.

Starting the Countdown Timer

- 1 Hold .
- 2 Select **Clocks > Timer**.
- 3 Enter the time, and select .
- 4 Press .

Activity Tracking

You can view activity tracking data and recorded activities in the Garmin Connect™ app.

Auto Goal

Your device creates a daily step goal automatically, based on your previous activity levels. As you move during the day, the device shows your progress toward your daily goal.

If you choose not to use the auto goal feature, you can set a personalized step goal on your Garmin Connect™ account.

Move IQ®

When your movements match familiar exercise patterns, the Move IQ feature automatically detects the event and displays it in your timeline. The Move IQ events show activity type and duration, but they do not appear in your activities list or newsfeed.

The Move IQ feature can automatically start a timed activity for walking and running using time thresholds you set in the Garmin Connect™ app or the watch activity settings. These activities are added to your activities list.

Activity Tracking Settings

Hold , and select **Settings > Activity Tracking**.


Status: Turns off the activity tracking features.

Move IQ: Allows you to turn on and off Move IQ events.

Auto Activity Start: Allows your watch to create and save timed activities automatically when the Move IQ feature detects you are walking or running. You can set the minimum time threshold for running and walking.

Turning Off Activity Tracking


When you turn off activity tracking, your steps and Move IQ events are not recorded.

- 1 From the watch face, hold .
- 2 Select **Settings > Activity Tracking > Status > Off**.

Customizing Your Device

Changing the Watch Face




You can choose from several preloaded watch faces. You can also edit each watch face ([Editing a Watch Face, page 18](#)).

- 1 Hold .
- 2 Select **Settings > Watch Face**.
- 3 Swipe right or left to scroll through the available watch faces.
- 4 Tap the touchscreen to select the watch face.

Editing a Watch Face

You can customize the style and data fields for the watch face.

NOTE: You cannot edit some watch faces.

- 1 Hold .
- 2 Select **Settings > Watch Face**.
- 3 Swipe right or left to scroll through the available watch faces.
- 4 Select  to edit a watch face.
- 5 Select an option to edit.
- 6 Swipe up or down to scroll through the options.
- 7 Press  to select the option.
- 8 Tap the touchscreen to select the watch face.

Golf Settings

Hold , and select **Settings > Golf Settings** to customize golf settings and features.

Personal Par: Sets the number of strokes that are automatically added to the par for every hole ([Setting Your Personal Par, page 7](#)).

Forward Tees: Sets your tee box level ([Forward Tees, page 6](#)).

Stat Tracking: Enables statistics tracking for the number of putts, greens in regulation, and fairways hit while playing golf ([Recording Statistics, page 8](#)).

Driver Distance: Sets the average distance the ball travels from the tee box on your drive. This helps determine your club recommendation.


Golf Distance: Sets the unit of measure for distance while playing golf.

Club Tracking: Displays a recommended club for each shot, and allows you to manage what clubs are available for recommendations.

Activities and App Settings

These settings allow you to customize each preloaded activity app based on your needs. For example, you can customize data pages and enable alerts and training features. Not all settings are available for all activity types.

From the watch face, press , select , select an activity, and select .

TIP: You can also edit the activity settings while you are exercising. During an activity, hold , select **Settings**, and select Current Activity.

Accent Color: Sets the accent color of each activity to help identify which activity is active.

Alerts: Sets the training or navigation alerts for the activity ([Activity Alerts, page 19](#)).

Auto Lap: Marks laps automatically at a specified distance. This feature is helpful for comparing your performance over different parts of an activity (for example, every 1 mile or 5 kilometers).

Auto Pause: Sets the device to stop recording data when you stop moving or when you drop below a specified speed. This feature is helpful if your activity includes stop lights or other places where you must stop.

Auto Rest: Automatically creates a rest interval when you stop moving during a pool swim activity.

Data Screens: Customizes data screens and adds new data screens for the activity ([Customizing the Data Screens, page 19](#)).

GPS: Sets the satellite system to use for the activity ([Satellite Settings, page 19](#)).

Pool Size: Sets the pool length for pool swimming.

Rename: Sets the activity name.

Customizing the Data Screens

You can customize the data fields for each data screen.

1 Press .

2 Select .

3 Select an activity.

4 Select .

5 Select **Data Screens**.


6 Select one or more options:

NOTE: Not all options are available for all activities.

- To adjust the style and number of data fields on each data screen, select the screen, and select **Layout**.
- To customize the fields on a data screen, select the screen, and select **Edit Data Fields**.
- To show or hide a data screen, select the toggle switch next to the screen.

Satellite Settings

You can change the satellite settings to customize the satellite systems used for each activity. For more information about satellite systems, go to garmin.com/aboutGPS.

Press , select , select an activity, select , and select **GPS**.

NOTE: This feature is not available for all activities.

Off: Disables satellite systems for the activity.

GPS Only: Enables the GPS satellite system.

All Systems: Enables multiple satellite systems. Using multiple satellite systems together offers increased performance in challenging environments and faster position acquisition than using GPS only. However, using multiple systems can reduce battery life more quickly than using GPS only.

Activity Alerts

You can set alerts for each activity, which can help you to train toward specific goals or increase your awareness of your environment. Some alerts are available only for specific activities. There are three types of alerts: event alerts, range alerts, and recurring alerts.

Event alert: An event alert notifies you once. The event is a specific value. For example, you can set the watch to alert you when you burn a specified number of calories.

Range alert: A range alert notifies you each time the watch is above or below a specified range of values. For example, you can set the watch to alert you when your pace is above 10 minutes per mile and below 15 minutes per mile.

Recurring alert: A recurring alert notifies you each time the watch records a specified value or interval. For example, you can set the watch to alert you every 30 minutes.

Alert Name	Alert Type	Description
Cadence	Range	You can set minimum and maximum cadence values.
Calories	Event, recurring	You can set the number of calories.
Custom	Event, recurring	You can select an existing message or create a custom message and select an alert type.
Distance	Recurring	You can set a distance interval.
Pace	Range	You can set minimum and maximum pace values.
Run/Walk	Recurring	You can set timed walking breaks at regular intervals.
Speed	Range	You can set minimum and maximum speed values.
Stroke Rate	Range	You can set high or low strokes per minute.
Time	Event, recurring	You can set a time interval.

Setting an Alert

1 Press .

2 Select .

3 Select an activity.

4 Select .

- 5 Select **Alerts**.
- 6 Select an option:
 - Select **Add New** to add a new alert for the activity.
 - Select the alert name to edit an existing alert.
- 7 If necessary, select the type of alert.
- 8 Select a zone, enter the minimum and maximum values, or enter a custom value for the alert.
- 9 If necessary, turn on the alert.


For event and recurring alerts, a message appears each time you reach the alert value. For range alerts, a message appears each time you exceed or drop below the specified range (minimum and maximum values).

User Profile

You can update your user profile on your watch or on the Garmin Connect™ app.

Setting Up Your User Profile

You can update your age, gender, and golf swing hand preference. The watch uses this information to calculate accurate training data.

- 1 Hold .
- 2 Select **Settings > User Profile**.
- 3 Select an option.

Gender Settings

When you first set up the watch, you must choose a sex. Most fitness and training algorithms are binary. For the most accurate results, Garmin® recommends selecting your sex assigned at birth. After the initial setup, you can customize the profile settings in your Garmin Connect™ account.

Profile & Privacy: Enables you to customize the data on your public profile.

User Settings: Sets your sex. If you select Not Specified, the algorithms that require a binary input will use the sex you specified when you first set up the watch.

System Settings

Hold , and select **Settings > System**.

Display: Adjusts the screen settings ([Customizing the Display Settings, page 21](#)).

Vibration: Turns vibration on or off and sets the vibration intensity.

Battery Manager: Sets how the remaining battery life displays and enables Battery Saver to extend battery life ([Battery Manager Settings, page 21](#)).

Time: Adjusts the time settings ([Time Settings, page 20](#)).

Units: Sets the units of measure used on the watch ([Changing the Units of Measure, page 21](#)).

Auto Lock: Locks the buttons and touchscreen automatically to prevent accidental button presses and touchscreen swipes.

Language: Sets the language displayed on the watch.

Reset: Resets the default settings or deletes personal data and resets the settings ([Resetting All Default Settings, page 21](#)).

Software Update: Checks for software updates.

About: Displays device, software, license, and regulatory information.

Advanced: Sets advanced system settings ([Advanced Settings, page 21](#)).

Time Settings

Hold , and select **Settings > System > Time**.


Time Format: Sets the watch to show time in a 12-hour, 24-hour, or military format.

Time Source: Sets the time for the watch. The Auto option sets the time automatically based on your GPS position.

Time: Adjusts the time if the Time Source option is set to Manual.


Time Sync: Allows you to manually sync the time when you change time zones, and to update for daylight saving time.

Customizing the Display Settings

- 1 Hold .
- 2 Select **Settings > System > Display**.
- 3 Turn **Large Fonts** on to increase the size of the text on the screen.
- 4 Select **Brightness** to set the brightness level of the screen.
- 5 Select **General Use** or **During Activity**.
- 6 Select an option:
 - Select **Timeout** to set the length of time before the screen turns off.
 - Select **Always On** to keep the watch face data visible and turn down the brightness and background. This option impacts the battery and display life ([About the AMOLED Display, page 22](#)).
 - Select **Gesture** to turn on the screen by raising and turning your arm to look at your wrist.
 - Select **Sensitivity** to adjust the gesture sensitivity to turn on the display more or less often.
- 7 Select **During Sleep > Watch Face** to choose a sleep watch face with minimal, dim settings or to keep the default watch face on during your sleep window.

NOTE: Your sleep window is from 10:00 p.m. until 6:00 a.m.

Battery Manager Settings

Hold , and select **Settings > System > Battery Manager**.


Battery Saver: Turns off certain features to maximize battery life.

Battery %: Displays the battery life as a remaining percentage.

Battery Est.: Displays the battery life as a remaining time estimate.

Changing the Units of Measure


You can customize units of measure for distance, pace and speed, weight, height, and temperature.

- 1 Hold .
- 2 Select **Settings > System > Units**.
- 3 Select a measurement type.
- 4 Select a unit of measure.

Resetting All Default Settings

Before you reset all default settings, you should sync the watch with the Garmin Connect™ app to upload your activity data.

You can reset all of the watch settings to the factory default values.

- 1 Hold .
- 2 Select **Settings > System > Reset**.
- 3 Select an option:
 - To reset all of the watch settings to the factory default values, including user profile data, but save activity history and downloaded apps and files, select **Reset Default Settings**.
 - To reset all of the watch settings to the factory default values and delete all user-entered information and activity history, select **Delete Data and Reset Settings**.

Advanced Settings

Hold , and select **Settings > System > Advanced**.

Data Recording: Sets how the device records activity data. The Smart recording option (default) allows for longer activity recordings. The Every Second recording option provides more detailed activity recordings, but may not record entire activities that last for longer periods of time.

USB Mode: Sets the watch to use MTP (media transfer protocol) or Garmin® mode when connected to a computer. Garmin mode allows you to continue using the watch while it is plugged in to a power source.

Device Information

About the AMOLED Display

By default, the watch settings are optimized for battery life and performance (*Maximizing Battery Life*, page 25).

Image persistence, or pixel "burn-in," is normal behavior for AMOLED devices. To extend the display life, you should avoid displaying static images at high brightness levels for long time periods. To minimize burn-in, the Approach® J1 display turns off after the selected timeout (*Customizing the Display Settings*, page 21). You can turn your wrist toward your body, tap the touchscreen, or press a button to wake the watch.

Changing the Band

You can replace the band with a new Approach® J1 band. To purchase replacement bands, go to buy.garmin.com.

NOTE: The watch is not compatible with third-party bands.

- 1 Slide the quick-release pin on the spring bar to remove one end of the band.



- 2 Repeat the step to remove the other end of the band.
- 3 Insert one side of the spring bar for the new band into the watch.
- 4 Slide the quick-release pin, and press the band into place.



- 5 Repeat the steps to install the other end of the band.

Specifications

Battery type	Rechargeable, built-in lithium-ion battery
Water rating	5 ATM ¹
Operating and storage temperature range	From -20° to 60°C (from -4° to 140°F)
Charging temperature range	From 0° to 45°C (from 32° to 113°F)
European Union (EU) wireless frequencies (power)	2,4 GHz: <13 dBm; 13,56 MHz: <42 dBuA/m @ 10m

Battery Information

The actual battery life depends on the features enabled on your watch.

Mode	Battery Life
Smartwatch mode	Up to 10 days typical use
All satellite systems mode	Up to 15 hr. typical use

Device Care

NOTICE

Avoid extreme shock and harsh treatment, because it can degrade the life of the product.

Avoid pressing the buttons under water.

Do not use a sharp object to clean the device.

Never use a hard or sharp object to operate the touchscreen, or damage may result.

Avoid chemical cleaners, solvents, and insect repellents that can damage plastic components and finishes.

Thoroughly rinse the device with fresh water after exposure to chlorine, salt water, sunscreen, cosmetics, alcohol, or other harsh chemicals. Prolonged exposure to these substances can damage the case.

Do not store the device where prolonged exposure to extreme temperatures can occur, because it can cause permanent damage.

Cleaning the Watch

⚠ CAUTION

Some users may experience skin irritation after prolonged use of the watch, especially if the user has sensitive skin or allergies. If you notice any skin irritation, remove the watch and give your skin time to heal. To help prevent skin irritation, ensure the watch is clean and dry, and do not overtighten the watch on your wrist.

NOTICE

Even small amounts of sweat or moisture can cause corrosion of the electrical contacts when connected to a charger. Corrosion can prevent charging and data transfer.

TIP: For more information, go to garmin.com/fitandcare.

- 1 Rinse with water, or use a damp lint-free cloth.
- 2 Allow the watch to dry completely.

Long-Term Storage

When you do not plan to use the device for several months, you should charge the battery to at least 50% before you store the device. You should store the device in a cool, dry place with temperatures around the typical household level. After storage, you should fully recharge the device before using it.

Viewing Device Information


You can view device information, such as the unit ID, software version, regulatory information, and license agreement.

- 1 Hold .
- 2 Select **Settings > System > About**.

¹ The device withstands pressure equivalent to a depth of 50 m. For more information, go to www.garmin.com/waterrating.

Viewing E-label Regulatory and Compliance Information

The label for this device is provided electronically. The e-label may provide regulatory information, such as identification numbers provided by the FCC or regional compliance markings, as well as applicable product and licensing information.

- 1 Hold .
- 2 From the settings menu, select **System**.
- 3 Select **About**.

Troubleshooting

Getting More Information

You can find more information about this product on the Garmin® website.

- Go to support.garmin.com for additional manuals, articles, and software updates.
- Go to buy.garmin.com, or contact your Garmin dealer for information about optional accessories and replacement parts.

Maximizing Battery Life

You can do several things to extend the life of the battery.

- Turn on **Battery Saver** (*Battery Manager Settings, page 21*).
- Stop using the **Always On** display timeout option, and select a shorter display timeout (*Customizing the Display Settings, page 21*).
- Reduce the display brightness (*Customizing the Display Settings, page 21*).
- Switch from a live watch face to a watch face with a static background (*Changing the Watch Face, page 18*).
- Turn off Bluetooth® technology when you are not using connected features (*Turning Off the Bluetooth® Phone Connection, page 11*).
- Turn off activity tracking (*Activity Tracking Settings, page 17*).

My device cannot find nearby golf courses

If a course update is interrupted or canceled before it completes, your device may be missing course data. To repair missing course data, you must update the courses again.

- 1 Download and install course updates from the Garmin Express™ application (*Updating the Software Using Garmin Express™, page 12*).
- 2 Safely disconnect your device.
- 3 Go outside, and start a test round of golf to verify the device finds nearby courses.


Is my phone compatible with my watch?

The Approach® J1 watch is compatible with phones using Bluetooth technology.



Go to garmin.com/ble for Bluetooth compatibility information.

My phone will not connect to the watch

If your phone will not connect to the watch, you can try these tips.

- Turn off your phone and your watch, and turn them back on again.
- Enable Bluetooth® technology on your phone.
- Update the Garmin Golf™ app to the latest version.
- Remove your watch from the Garmin Golf app and the Bluetooth settings on your phone to retry the pairing process.
- If you bought a new phone, remove your watch from the Garmin Golf app on the phone you intend to stop using.
- Bring your phone within 10 m (33 ft.) of the watch.
- On your phone, open the Garmin Golf app, and select **Profile > My Devices > Add Device** to enter pairing mode.
- From the watch face, hold , and select **Settings > Phone > Pair Phone**.

My device is in the wrong language



- 1 Hold .
- 2 Select .
- 3 Scroll down to the last item in the list, and select it.
- 4 Scroll down to the seventh item in the list, and select it.
- 5 Select your language.

My device displays the wrong units of measure

- Verify you selected the correct units of measure setting on the device (*Changing the Units of Measure, page 21*).

- Verify you selected the correct units of measure setting on your Garmin Golf™ account.
If the units of measure on the device do not match your Garmin Golf account, your device settings may be overwritten when you sync your device.

Restarting Your Watch

- 1 Hold  until the watch turns off.
- 2 Hold  to turn on the watch.

Acquiring Satellite Signals

The device may need a clear view of the sky to acquire satellite signals. The time and date are set automatically based on the GPS position.

TIP: For more information about GPS, go to garmin.com/aboutGPS.

- 1 Go outdoors to an open area.
The front of the device should be oriented toward the sky.
- 2 Wait while the device locates satellites.
It may take 30–60 seconds to locate satellite signals.

Improving GPS Satellite Reception

- Frequently sync the watch to your Garmin® account:
 - Connect your watch to a computer using the USB cable and the Garmin Express™ application.
While connected to your Garmin account, the watch downloads several days of satellite data, allowing it to quickly locate satellite signals.
- Take your watch outside to an open area away from tall buildings and trees.
- Remain stationary for a few minutes.

Activity Tracking

For more information about activity tracking accuracy, go to garmin.com/ataccuracy.

My daily step count does not appear

The daily step count is reset every night at midnight.

If dashes appear instead of your step count, allow the device to acquire satellite signals and set the time automatically.

My step count does not seem accurate

If your step count does not seem accurate, you can try these tips.

- Wear the watch on your non-dominant wrist.
- Carry the watch in your pocket when pushing a stroller or lawn mower.
- Carry the watch in your pocket when actively using your hands or arms only.
NOTE: The watch may interpret some repetitive motions, such as washing dishes, folding laundry, or clapping your hands, as steps.

The step counts on my watch and my Garmin Connect™ account don't match

The step count on your Garmin Connect account updates when you sync your watch.

- 1 Select an option:
 - Sync your step count with the Garmin Express™ application (*Using Garmin Connect™ on Your Computer, page 12*).
 - Sync your step count with the Garmin Connect app (*Using the Smartphone Apps, page 12*).
- 2 Wait while your data syncs.
Syncing can take several minutes.
NOTE: Refreshing the Garmin Connect app or the Garmin Express application does not sync your data or update your step count.

Appendix

Data Fields

Average Lap Time: The average lap time for the current activity.

Average Speed: The average speed for the current activity.

Average Swolf: The average swolf score for the current activity. Your swolf score is the sum of the time for one length plus the number of strokes for that length (*Swim Terminology, page 15*).

Avg. Pace: The average pace for the current activity.

Avg. Stks./Len.: The average number of strokes per length during the current activity.

Distance: The distance traveled for the current track or activity.

Elapsed Time: The total time recorded. For example, if you start the timer and run for 10 minutes, then stop the timer for 5 minutes, then start the timer and run for 20 minutes, your elapsed time is 35 minutes.

Heading: The direction you are moving.

Int. Stks./Len.: The average number of strokes per length during the current interval.

Interval Distance: The distance traveled for the current interval.

Interval Lengths: The number of pool lengths completed during the current interval.

Interval Pace: The average pace for the current interval.

Interval Swolf: The average swolf score for the current interval.

Interval Time: The stopwatch time for the current interval.

Int Strk Type: The current stroke type for the interval.

L. Len. Stk. Type: The stroke type used during the last completed pool length.

L. Len. Strokes: The total number of strokes for the last completed pool length.

Lap Distance: The distance traveled for the current lap.

Lap Pace: The average pace for the current lap.

Laps: The number of laps completed for the current activity.

Lap Speed: The average speed for the current lap.

Lap Steps: The number of steps during the current lap.

Lap Time: The stopwatch time for the current lap.

Last Int. Swolf: The average swolf score for the last completed interval.

Last Lap Dist.: The distance traveled for the last completed lap.

Last Lap Pace: The average pace for the last completed lap.

Last Lap Speed: The average speed for the last completed lap.

Last Lap Time: The stopwatch time for the last completed lap.

Last Len. Swolf: The swolf score for the last completed pool length.

Last Length Pace: The average pace for your last completed pool length.

Lengths: The number of pool lengths completed during the current activity.

Maximum Speed: The top speed for the current activity.

Moderate Minutes: The number of moderate intensity minutes.

Pace: The current pace.

Speed: The current rate of travel.

Steps: The number of steps during the current activity.

Sunrise: The time of sunrise based on your GPS position.

Sunset: The time of sunset based on your GPS position.

Swim Time: The swimming time for the current activity, not including rest time.

Time of Day: The time of day based on your current location and time settings (format, time zone, daylight saving time).

Timer: The stopwatch time for the current activity.

Timer: The current time of the activity timer.

Total Minutes: The total number of intensity minutes.

Vigorous Minutes: The number of vigorous intensity minutes.

support.garmin.com

© 2026 Garmin Ltd. or its subsidiaries

Garmin®, the Garmin logo, Approach®, and Move IQ® are trademarks of Garmin Ltd. or its subsidiaries, registered in the USA and other countries. Garmin AutoShot™, Garmin Connect™, Garmin Express™, and Garmin Golf™ are trademarks of Garmin Ltd. or its subsidiaries. These trademarks may not be used without the express permission of Garmin.

The Bluetooth® word mark and logos are owned by Bluetooth SIG, Inc. and any use of such marks by Garmin is under license. Other trademarks and trade names are those of their respective owners.

M/N: AA4999

